

User Manual Book

Water Dispenser

Copertina Series

DD 1380

Feroce Series

DD 0370



Thank you for your trust in choosing MODENA products for your household needs. With your satisfaction as our priority, we constantly aim to deliver stylishly designed products equipped with state-of-the-art technology to assist you in your daily activities.



This is your guidebook containing everything you need to know about our product. Please reach out to us if you need further assistance or other information via our Customer Care or our official website www.modena.com.

MODENA

CONTENTS	PAGE.
• Introduction	1
• Part 1 : Name of Parts	3
• Part 2 : Installation	5
• Part 3 : How to Use	5
• Part 4 : Maintenance	5
• Part 5 : Precaution Action	6
• Part 6 : Problem & Solution	7
• Part 7 : Specification	8

Part 1: Name of Parts

 
 
DD 1380

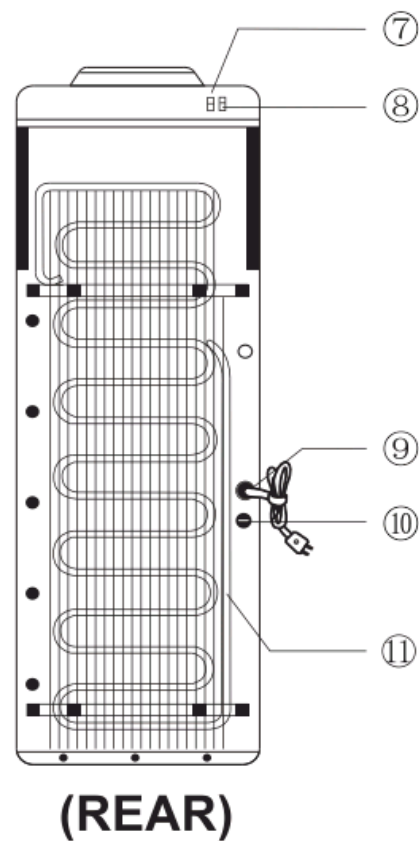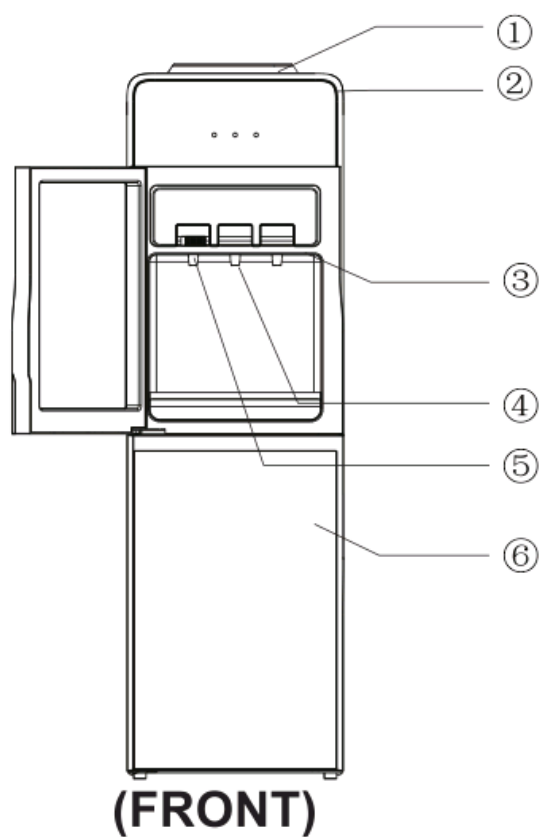

Remarks:

- | | |
|---------------------|-------------------|
| 1. Bottle supporter | 7. Cooling switch |
| 2. Top Cover | 8. Heating switch |
| 3. Cold water tap | 9. Power cord |
| 4. Normal water tap | 10. Drain hole |

  DD 0370

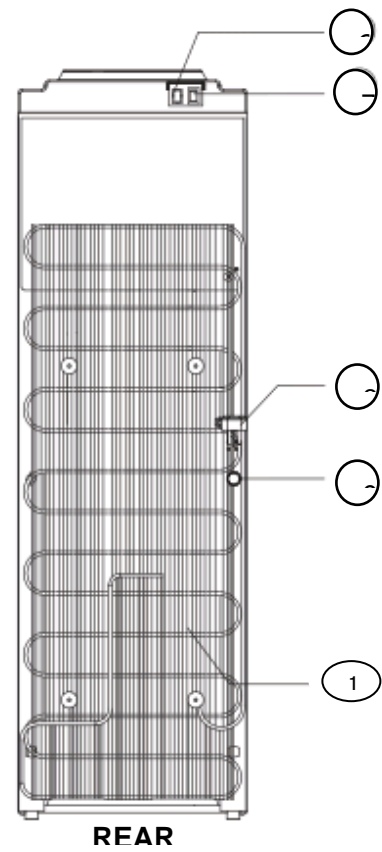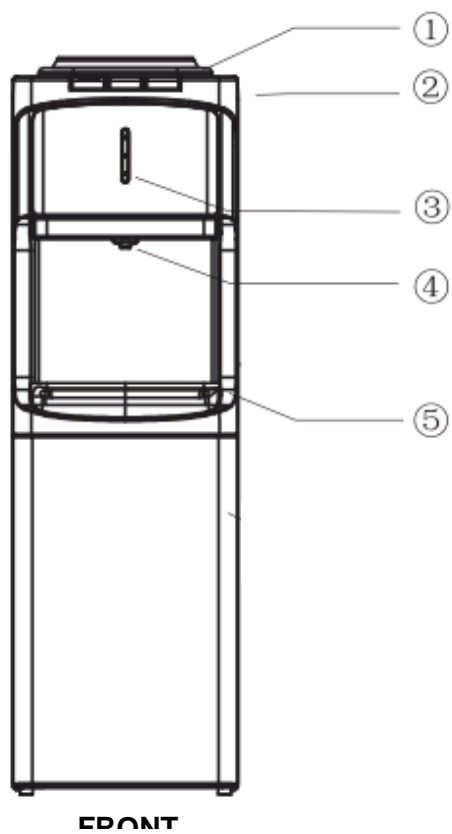


Remarks:

- | | |
|---------------------|-------------------|
| 1. Bottle supporter | 7. Heating switch |
| 2. Top Cover | 8. Power cord |
| 3. Indicator light | 9. Drain hole |
| 4. Water tap | 10. Condenser |

Part 2: Installation

 1. Install the dispenser on a flat and stable surface.
2. Install the water gallon in the correct position.
3. Press the hot water tap (red) until the water flows out from the tap.
4. Connect the power cord into the socket. Then turn on the red switch (heating) located on the back of the unit.
5. When the gallon is empty, turn off the red switch (heating) before replacing it with a new one.

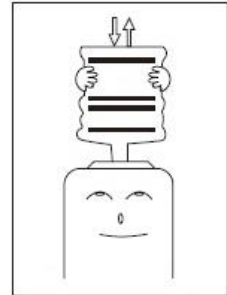

Attention :

- **Do not connect the dispenser to a socket nor switch the red switch heater) if there's no water in the tank or if the water is not running from the hot water tap (red) when the tap is used.**

Part 3: How to Use

How to use a dispenser with three taps:

- To dispense hot water, push the left button / tap.
- To dispense normal-temperature water, push the central button / tap.
- To dispense cold water, push the right button / tap.

This unit features a safety on hot water button to keep hazards out of the reach of children.



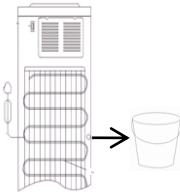
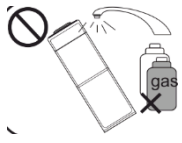
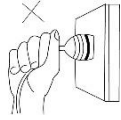
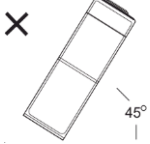
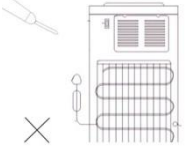
Attention:

- Avoid exposure to hot water.


Part 4: Maintenance

1. To avoid unwanted incidents, always disconnect the appliance from electrical sources before cleaning the dispenser.
2. This dispenser has been disinfected before shipped.
3. Clean the bottle support, water tube, and heating element by an expert technician once a year to ensure the machine maintains good condition and extend the usage. Do not disassemble the machine to avoid damage to the machine.
4. Use a soft and slightly wet cloth to clean the surface of dispenser, and use a soft and dry cloth to wipe the surface. Do not let the water get into the engine.
5. Make sure the power cord is unplugged from the power socket when disposing of the residual water or during maintenance or unit is not being used for a long time. Meanwhile, when the hot water tap dispense cold water, open the drain valve until there is no water left in the unit.

Part 5: Precaution Action
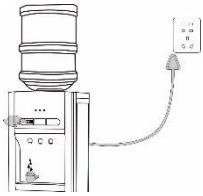
<p>1. Place the dispenser on an even surface. Avoid placing it in a humid place. Provide a minimum of 20 cm distance from the wall and do not store flammable substances near the dispenser.</p>	
<p>2. To avoid damaging the machine, do not connect the electrical cord or pressing hot water switch (red) until the water can flow out from the hot water tap without obstruction.</p>	
<p>3. If the dispenser won't be used for a long period, turn off the heater and cooler switches and disconnect the cord from the electrical socket and drain the water through the drainage.</p>	
<p>4. Do not use chemical substances or spray the water directly to clean the dispenser. Use soft cloth instead.</p>	
<p>5. Do not pull the cord to disconnect the plug from the socket. Pull the plug with dry hand.</p>	
<p>6. Do not put the dispenser horizontally. The slope should not exceed 45° to avoid damage to the compressor.</p>	
<p>7. The thermostat on the dispenser has been adjusted by the manufacturer. Do not attempt to modify the thermostat to avoid unwanted effect.</p>	

 8. This product is designed for adults. Do not allow children to play with the appliance or let them hang on the door. The unit might fall and harm the children. The product is not intended for use by people (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

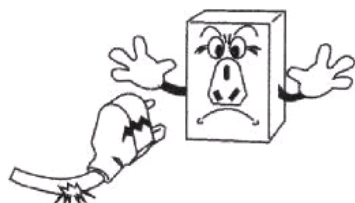

If there is damage to the power cord immediately contact the MODENA call center for replacement. Replacing the power cord must be done by personnel with experience and understanding of electricity. Never replace the power cord by yourself, due to the dangers that could lead to harm to you and the others.



Attention! This product must not be disposed of with other household waste. To prevent possible harm to the environment or human health from uncontrolled waste disposal.

The unit contains gas insulation and refrigerant that must be disposed of properly. When you want to dispose of the product, We advise you to consult with authorized service providers so they can learn the information required and official forms.

Make sure the refrigerant pipes and ductwork in the unit is not damaged before taken by the used goods handling department.

Consult with authorized service providers to ask all the things and issues related to the units. Do not do things or allow others to do things to the unit before asking the official service providers.

Part 6: Problem & Solution

Please inspect the following before contacting the Call Center in the event of operational disturbance:

Problem	Cause	Solution
Water is not hot or not cold.	<ul style="list-style-type: none">- Excessive dispensation of hot water or cold water in a short period of time.- Unit is not yet connected to electricity.	<ul style="list-style-type: none">- Wait until the water becomes cold or hot.- Connect the cord to the socket and press the heater and cooler switches.
Water is not being dispensed out of the tap.	<ul style="list-style-type: none">- Water gallon is empty.	<ul style="list-style-type: none">- Replace the water gallon with a new one
Leak on the water gallon support.	<ul style="list-style-type: none">- Water gallon is leaking / damaged.	<ul style="list-style-type: none">- Replace water gallon with a new one.
Loud noise during operation.	<ul style="list-style-type: none">- Improper installation or placement of unit.	<ul style="list-style-type: none">- Install unit on even and stable surface.

Part 7: Specification

MODEL	DD 1380	DD 0370
Type	Cold, Hot & Normal	Cold, Hot & Normal
Lower chamber	Yes	No
Color	Black	Black Stainless
Hot water output (liter/hour)	2	2
Cold water output(liter/hour)	2	2
High temperature (Celsius)	≥90	≥90
Cold temperature (Celsius)	≤10	≤10
Free-CFC compressor	Yes	Yes
Regulator of thermostat	Yes	Yes
Water tube material	Stainless	Stainless
Heating Power (watt)	190	190
Compressor power (watt)	100	100
Product Dimension (L x W x H) mm	295 x 315 x 1012	310 x 336 x 1012
Product weight (Kg)	13.7	12

* The specifications of this appliance may change without notice to improve the quality of the product. The pictures in this manual are schematic and may not exactly match your product. Values stated on the machine labels or in the documentation accompanying it are obtained in laboratory in accordance with the relevant standards. Depending on operational and environmental conditions of the appliance, values may vary.

