

User

Manual Book

(Vacuum Cleaner)

Compatto Series

VC 0800 L

MODENA


Thank you for your trust in choosing MODENA products for your household needs. With your satisfaction as our priority, we constantly aim to deliver stylishly designed products equipped with state-of-the-art technology to assist you in your daily activities.

This is your guidebook containing everything you need to know about our product. Please reach out to us if you need further assistance or other information via our Customer Care or our official website www.modena.com.

MODENA

TABLE OF CONTENTS	PAGE
INTRODUCTION	1
● Part 1 : Name of Parts	3
● Part 2 : How to Use	4
● Part 3 : Maintenance	7
● Part 4 : Points of Attention	9
● Part 5 : Troubleshooting	10
● Part 6 : Specification	11


Part 1: Name of Parts

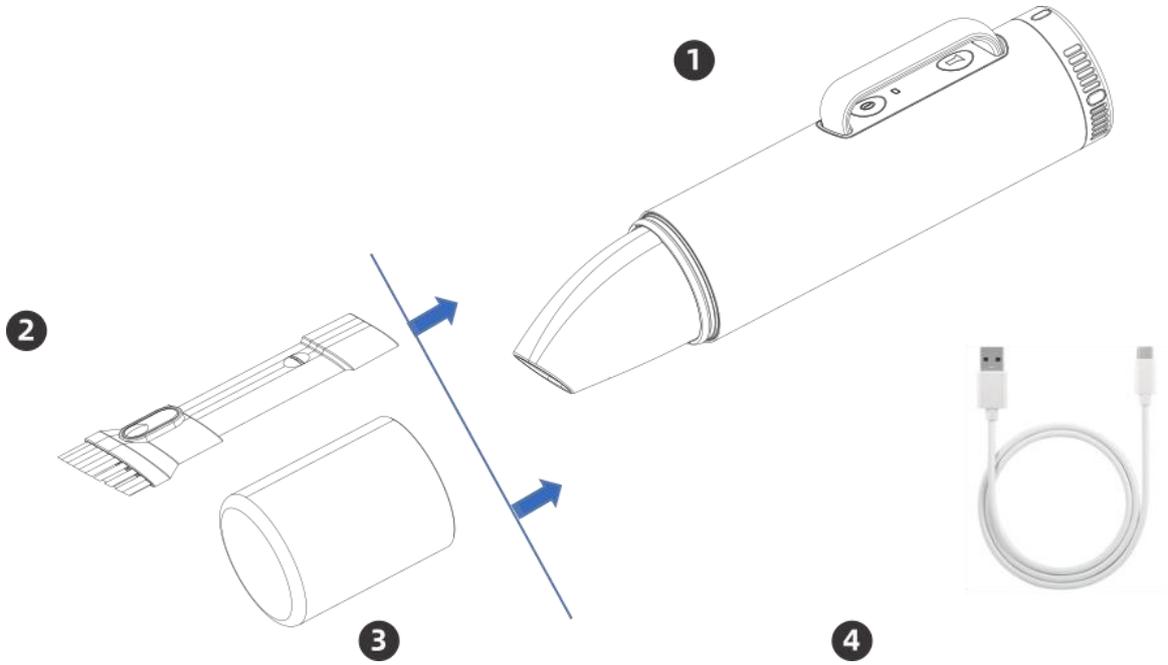


1	Body
2	2-in-1 Brush
3	Nozzle Cover
4	USB Type C Charging Cable

Part 2: How to Use


1. Pull the handle and remove the nozzle cover

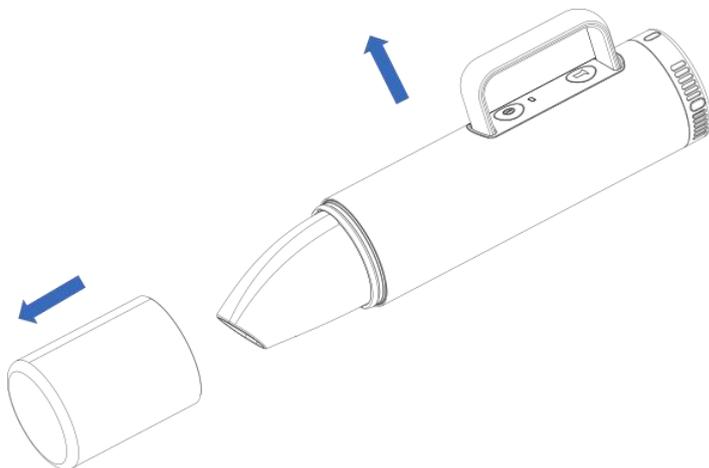




2. You may insert the 2-in-1 brush into the nozzle

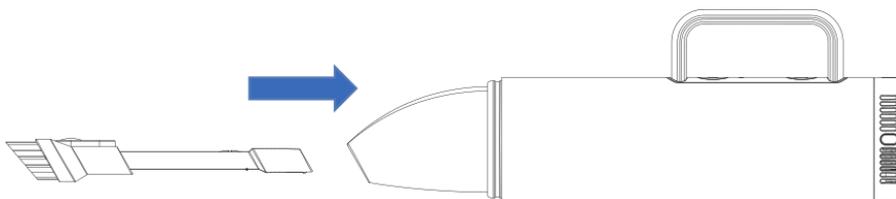

3. Press the power button to turn on the product and press it again to turn off the product

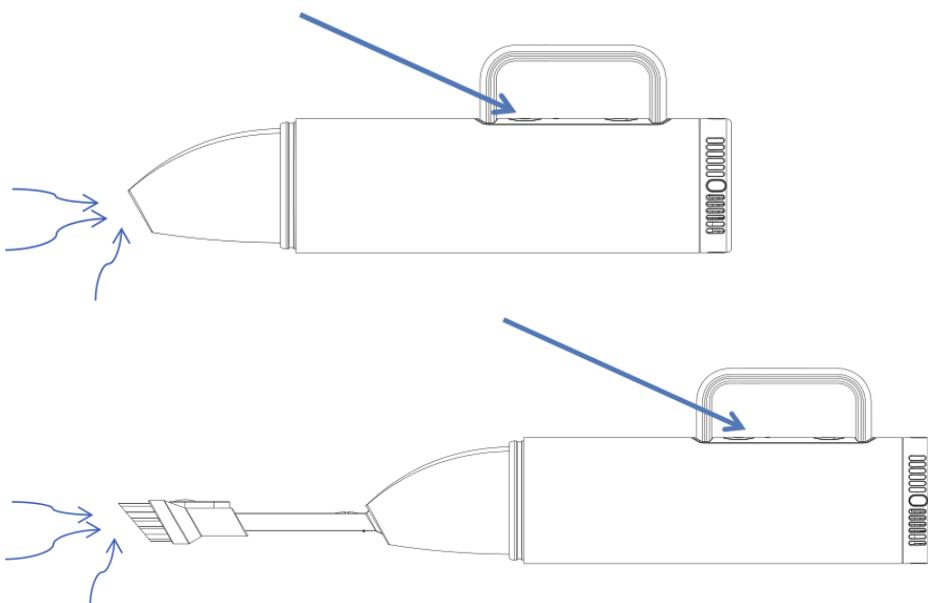

4. Press the flashlight button to turn on the flashlight. The flashlight has 3 modes (high beam, night light, and SOS flash), it will **switch between the modes in this cycle** when you press the button again.

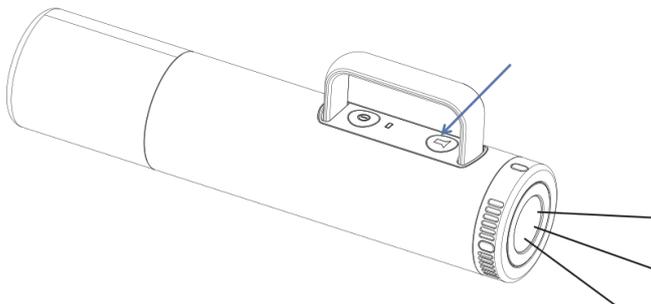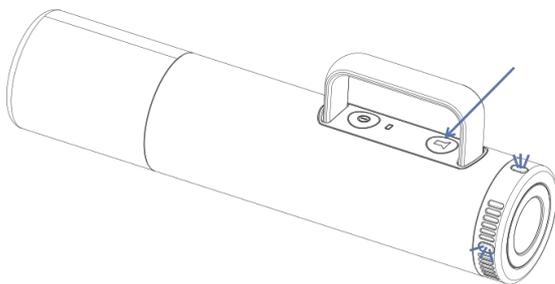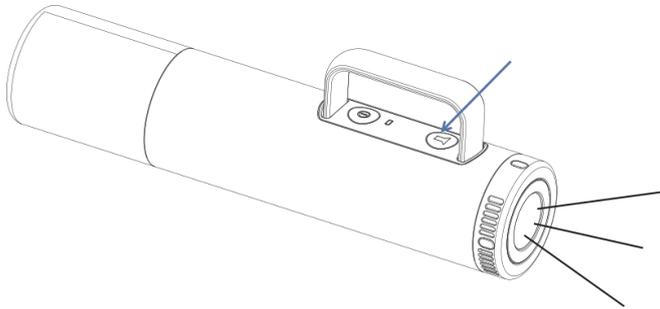


5. Press and hold the flashlight button for 3 seconds to turn off the flashlight

How to Charge

If the red light is flashing slowly, **it means that** the power is low and needs to be charged.

1. Place the product horizontally when it has stopped working.
2. Insert the USB end of the Type C charging USB cable into the 5V 2A adapter (adapter not included) and connect to the power **socket**.

3. Insert the Type C end of Type C charging USB cable into the Type C socket on the product.

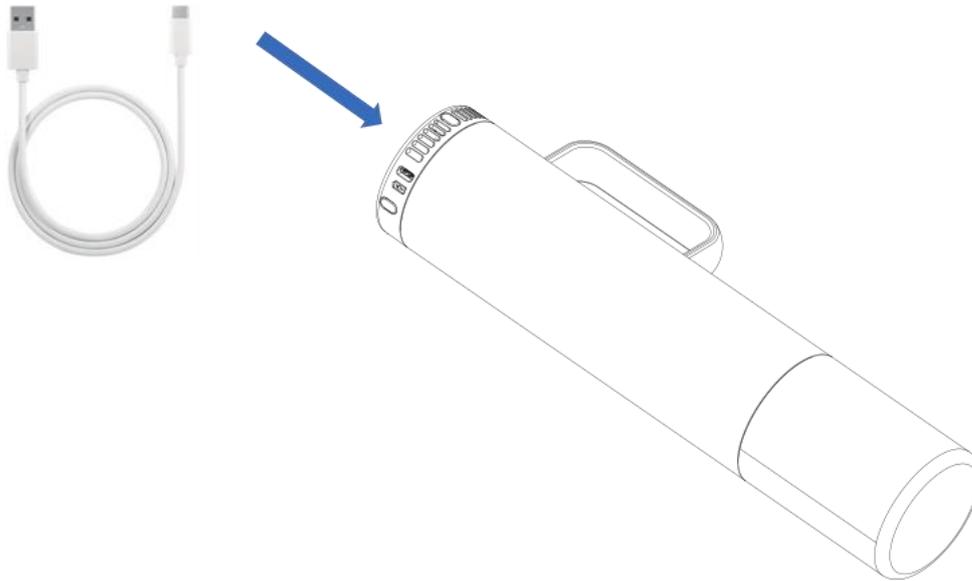

4. If the green light is flashing slowly, the product is charging normally.
5. If all the green light is on, the **battery** is fully charged.
6. Remove charging cable from the product.

Attention!


1. Please note that the charging port of the machine should not be exposed to water. Otherwise, it will cause product failure.
2. Do not charge or store the product in a place below 0°C or above 40°C, otherwise the product performance will be reduced.
3. It is a normal phenomenon that temperature of the charger rises during charging.

Part 3: Maintenance


- When you need to clean and maintain this product, be sure to disconnect the power supply.
- Please do not immerse the main unit in water.
- Wipe gently with a clean soft cloth dampened with water or a mild detergent.
- Do not use **corrosive liquid** such as gasoline, alcohol or rubber water.

Removing and Cleaning the Dust Cup and Filter


1. Turn the dust cup counterclockwise and pull to remove the dust cup.

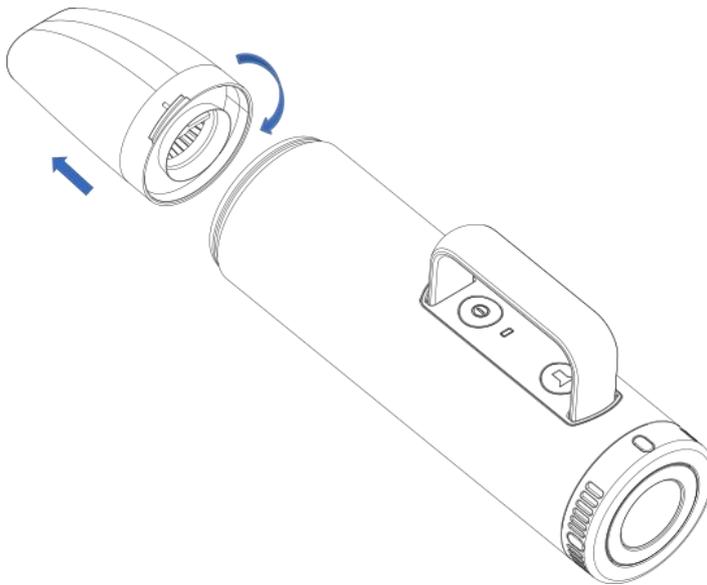

2. Remove the filter housing from the dust cup and clean the dust cup

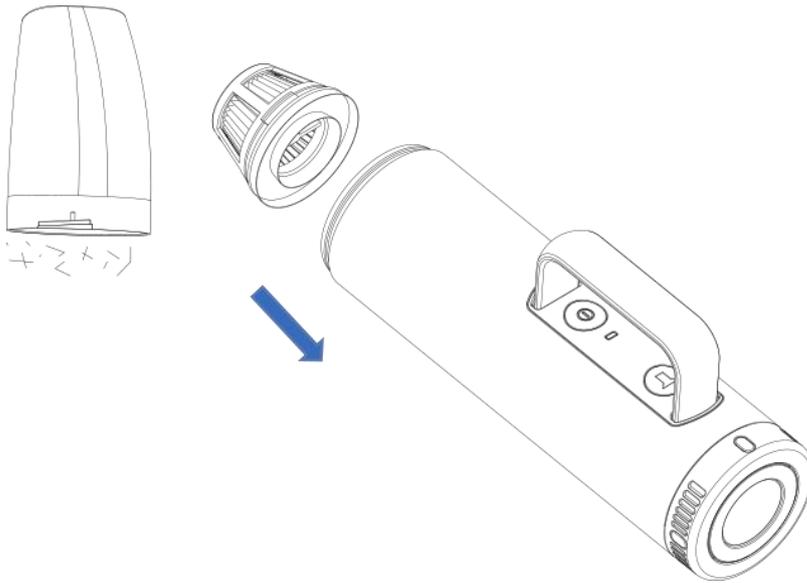

3. Rotate the filter housing clockwise and pull out the filter housing. Take out the inner filter for cleaning or replacement.

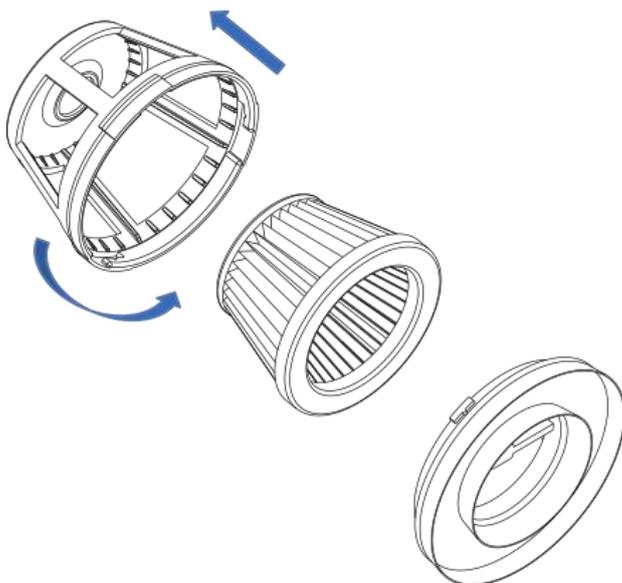

4. Wash the filters under flowing water and let them dry completely
5. After each part is completely dried, reassemble it in reverse order when disassembling

Part 4: Points of Attention

1. This unit is suitable for indoor **usage** and read this manual before **usage**.
2. Suitable for cleaning particles or dust less than 10 mm.
3. Not suitable for cleaning liquids, organic solvents, and construction waste and industrial metal waste.
4. When the power is turned on for a long time until **the battery completely runs out**, turn off and rest **it** for 30 minutes before recharging it to protect the motor and prolong its service life.
5. Please keep the machine clean and store all accessories in a dry and cool place.
6. After 6 months long of storage, **the appliance must be turned on until it runs out of battery, and then recharge it.**
7. **Use** and charge the product for three times to achieve best motor and battery condition

Part 5: Troubleshooting

Please review the chart below before contacting customer service:

Problem	Possible Causes	Solution
Running time is shorter after full charging	Battery life problem	Please contact dealer for processing
Red light flashing slowly during operation	Low power	Recharge
Red light flashing quickly during operation	Battery is broken	Please contact dealer for processing

Part 6: Specification

Model	VC 0800 L
Type	Vacuum cleaner
Color	Black (L)
Power type	Rechargeable
Power supply	5V 2A
Battery capacity	Li-Ion 7.2V, 2 cells, 2.0 AH
Rated Power Input (Watt)	85
Charging time (hours)	2±0.5
Suction Power (kPa)	5.8±0.8
Dust cup capacity (mL)	100
Cleaning efficiency	99%
Product dimension W x D x H (mm)	87.5x70x316.5
Product weight (kg)	0.8

*) S = Stainless, R = Red, C = Cream, O = Orange, N = Green, U = Blue, W = White, V = Silver, G = Grey, L = Black

Design and specification can change without prior notice to improve the quality of the product. The pictures in this manual are schematic and can be different with your actual product. The values on label or in other documents are according to laboratory test and relevant standards. Values can vary depending on the actual operational and environmental condition of the product.

