

User Manual Book Refrigerator

Argento Series

RF 4540 S, RF 2551 S,
RF 2255 , RF 2336 S,
RF 2335 S

MODENA

Thank you for your trust in choosing MODENA products for your household needs. With your satisfaction as our priority, we constantly aim to deliver stylishly designed products equipped with state-of-the-art technology to assist you in your daily activities.

This is your guidebook containing everything you need to know about our product. Please reach out to us if you need further assistance or other information via our Customer Care or our official website www.modena.com.

TABLE OF CONTENT

Part 1: Safety information	4
Part 2: Name of parts	7
RF 4540 S	7
RF 2551 S	8
RF 2255 S	9
RF 2336 S, RF 2335 S	10
Part 3: Installation guide	11
Before first use	11
Moving the appliance	11
Installation environment	11
Feet adjustment	12
Reversible doors (RF 2336 S, RF 2335 S)	12
Part 4: How to use	13
RF 4540 S, RF 2336 S, RF 2335 S, RF 2551 S	13
RF 2255 S	15
Door Alarm	16
Accessories	16
First use	16
Daily use	17
Food storage tips	17
Part 5: Maintenance	21
Defrosting	21
LED lamp replacement	22
Environmental notice	22
Part 6: Troubleshooting	23
Part 7: Specification	25
Appendix 1: Door installation guide (RF 2336 S, RF 2335 S)	28
Appendix 2: Food storage guide	32

PART 1: SAFETY INFORMATION

READ THIS MANUAL CAREFULLY!

Symbol	Type	Definition
	WARNING	Serious injury or death risk
	RISK OF ELECTRIC SHOCK	Dangerous voltage risk
	FIRE HAZARD	Risk of fire or flammable material
	CAUTION	Injury or property damage risk
	IMPORTANT	Important information on product operations

-  Keep the air ventilation open, if the appliance is set in enclosed space or in the built-in structure and clear from any obstructions.
-  Do not use electrical devices inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
-  Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
-  Do not damage the refrigerant circuit.
-  When positioning the appliance, ensure the supply cord is not trapped or damaged.
-  The refrigerant and insulation blowing agent inside the

refrigerator need a special disposal procedure. Consult the disposal method with related parties.



Your refrigerator contains iso-butane refrigerant (R600a) in a small quantity. Make sure there is no damage or leakage. Refrigerant leakage may lead to fire or damage to your eyes. If a leakage is detected, move the refrigerator away from the fire sources or any other potential sources which can cause fire.



WARNING! Do not place multiple portable socket or portable power supplies on the back of the appliance

- Do not use power socket adapter
- For products using Fixing Bracket




WARNING! To avoid a danger due to instability of the appliance, it must be fixed in accordance with the instructions.

- Opening the door for a long period of time can cause a significant increase of the temperature in the compartment of the appliance
- Clean the surfaces that contact with food directly and also the accessible drainage systems regularly
- Store raw meat and fish in suitable containers in the refrigerator, so that they do not contact with or drip onto other foods.
- If the refrigerating appliance is left empty for a long period of time; switch it off, defrost, clean, dry, and leave the door open to prevent mold from developing within the appliance
- While carrying and placing the refrigerator, do not damage the cooler gas circuit.

- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- This appliance is intended to be used in household and domestic applications
- If the socket does not match the refrigerator plug, it must be replaced by the manufacturer, a service agent or similar qualified persons in order to avoid accidents.
- A specially grounded plug has been connected to the power cord of your refrigerator. This plug should be used with a specially grounded power socket of 16 amperes. If there is no such socket available in your house, please have one installed by an expert authorized electrician.
- Children are not allowed to perform cleaning or user maintenance of the appliance, very young children (0-3 years old) are not allowed to use appliances, young children (3-8 years old) are allowed to use appliances under surveillance, older children (8-14 years old) and vulnerable people can use appliances safely after they have been given appropriate surveillance or instruction concerning the use of the appliance and the risks that may occur. Very vulnerable people are not allowed to use appliances unless continuous surveillance is given.
- If the supply cord is damaged, it must be replaced by a technician an authorized service agent or similar qualified persons, in order to avoid danger.
- This appliance is not intended for use at altitudes higher than 2000 meters above the sea level.

PART 2: NAME OF PARTS

RF 4540 S

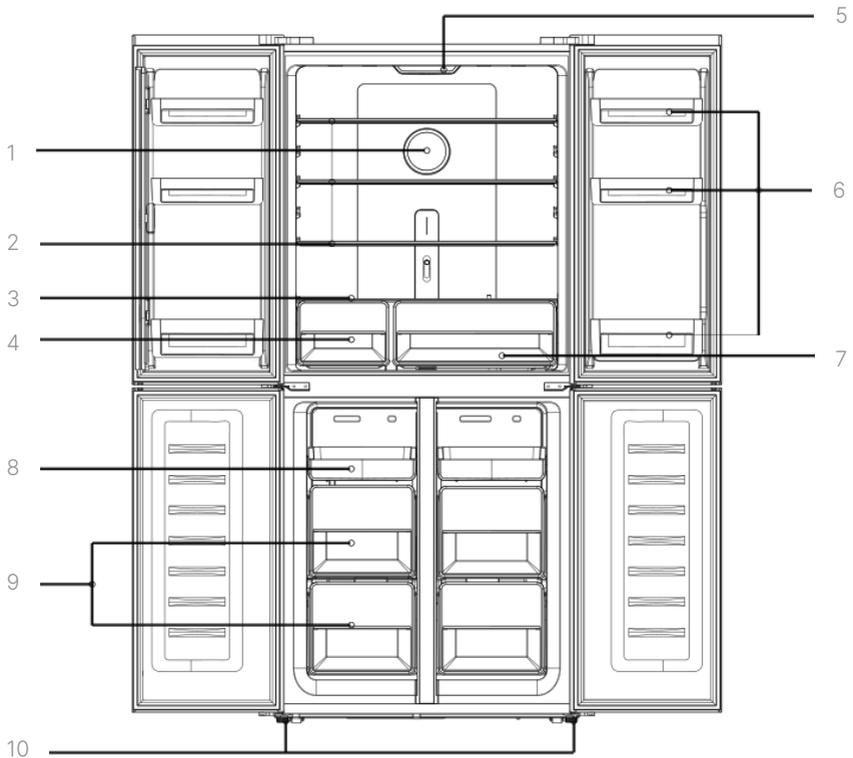


Note:

- 1. Anti-bacterial and deodorizer
- 2. Refrigerator shelf
- 3. Crisper & chiller cover
- 4. Crisper drawer
- 5. LED light

- 6. Door basket
- 7. Chiller drawer
- 8. Sliding shelf
- 9. Freezer drawer
- 10. Adjustable feet


RF 2551 S

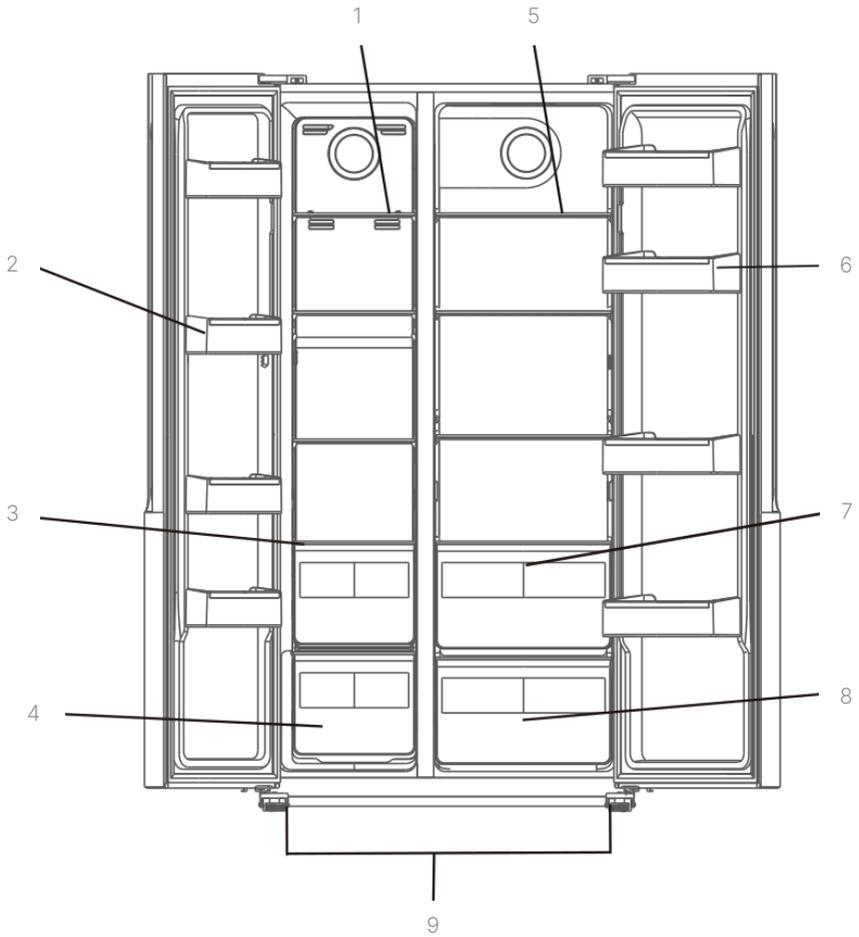

Note:

- | | |
|-------------------------|-----------------------------|
| 1. Freezer shelf | 6. Refrigerator door basket |
| 2. Freezer door basket | 7. Crisper drawer |
| 3. Freezer drawer cover | 8. Refrigerator drawer |
| 4. Freezer drawer | 9. Adjustable feet |
| 5. Refrigerator shelf | |


RF 2255 S

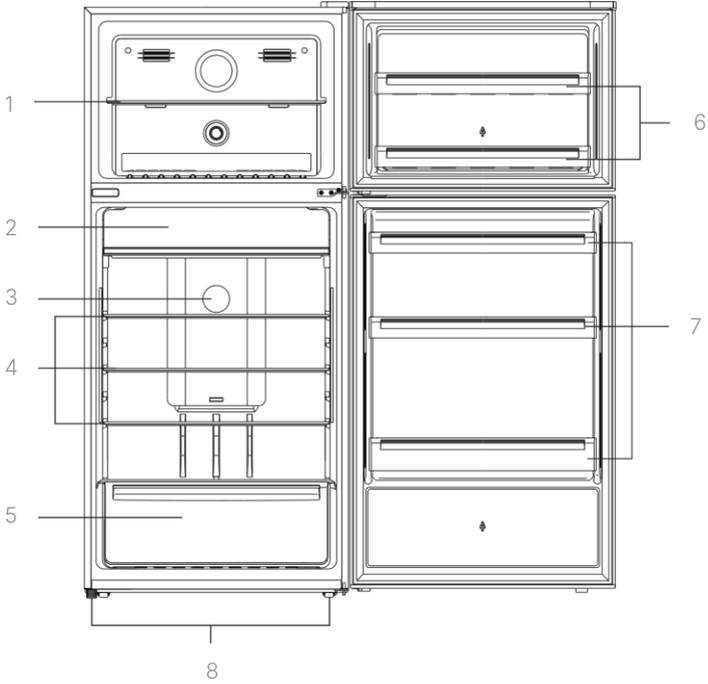

Note:

1. Freezer shelf
2. Chiller drawer
3. Decorative block
4. Refrigerator shelf
5. Crisper drawer
6. Freezer door basket
7. Refrigerator door basket
8. Adjustable feet

RF 2336 S, RF 2335 S

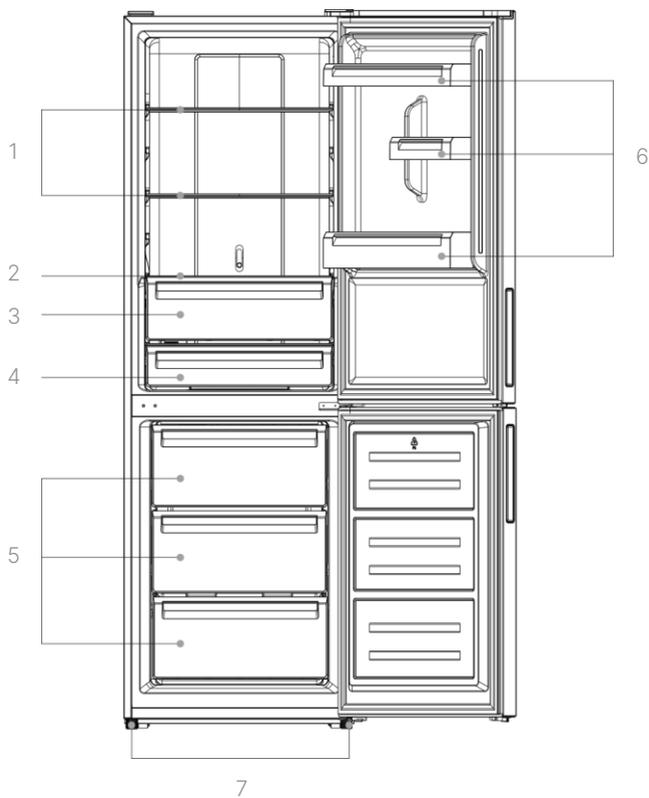

Note:

1. Refrigerator shelf
2. Crisper cover
3. Crisper drawer
4. Chiller drawer
5. Freezer drawer
6. Refrigerator door basket
7. Adjustable feet

PART 3: INSTALLATION GUIDE

Before First Use

- Remove all packages, including the foam backing at the bottom of refrigerator and the tapes fixing accessories in the box.
- Place the refrigerator to a proper position, and adjust the feet to level. It is better to clean the refrigerator before use.


Moving the Appliance

- Do not carry the refrigerator horizontally or reversely
- Do not carry the refrigerator by holding the door or handle; the refrigerator shall be carried by lifting the bottom.




Installation Environment

- Keep away from heat sources or direct sunlight
- The refrigerator must be placed on a hard and flat ground
- The refrigerator shall be kept away from damp locations where water is easy to splash; water or dirt shall be removed with soft cloth timely to prevent rusting which may have an effect on the electrical characteristics.
- Place the refrigerator in a well-ventilated place, reserve a certain space around and behind the refrigerator, and do not cover or block the air grille on the rear cover plate of compressor at the back of refrigerator
- Provide space of minimum 100 mm between the back of the refrigerator with the wall, and minimum 50 mm between both sides of the refrigerator with the wall or other objects

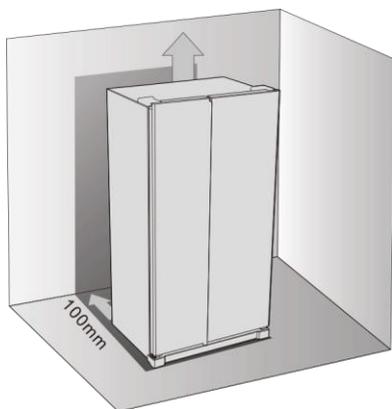

Feet Adjustment

- Please make sure to adjust two front plastic feet until the height is suitable
- Turn the feet clockwise to heighten them or rotate the feet counterclockwise to lower them until the desired height.

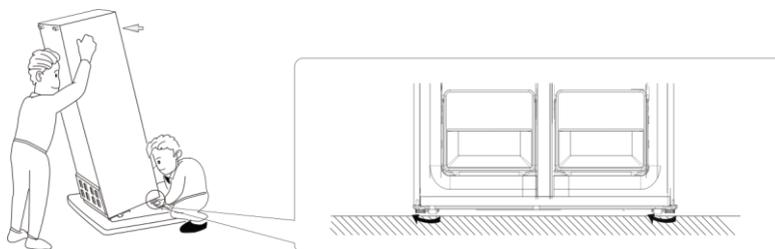


Reversible doors (RF 2336 S, RF 2335 S)

See Appendix 1.

PART 4: HOW TO USE

RF 4540 S, RF 2336 S, RF 2335 S, RF 2551 S

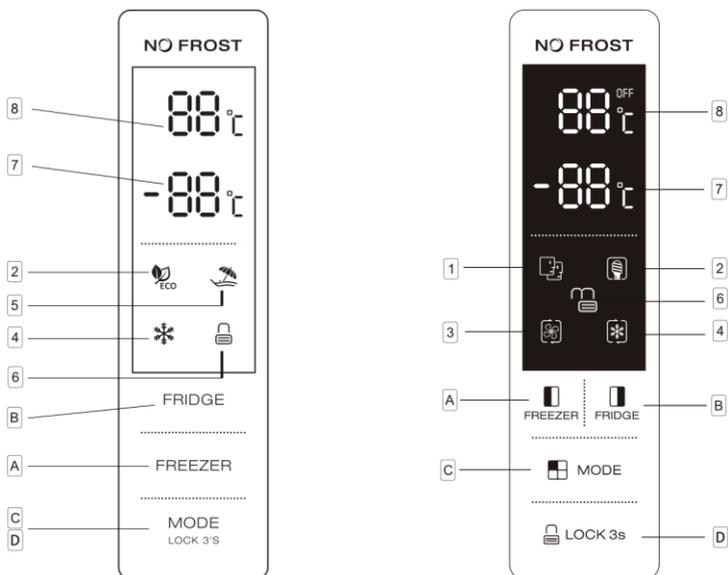

1. SMART mode indicator
2. ECO mode indicator
3. Super Cooling mode indicator
4. Super Freezer mode indicator
5. Holiday mode indicator
6. Lock indicator
7. Freezer temperature display
8. Refrigerator temperature display

Buttons

A. Refrigerator Temperature Setting

Press the button to adjust the refrigerator temperature, the temperature display will blink consecutively and the temperature will

change in a cycle of 2°C-3°C-4°C-5°C-6°C-7°C-8°C-OFF. After the display blinks for 5 seconds, the temperature setting will be applied.

B. Freezer Temperatures Setting

Press the button to adjust the freezer temperature, the display will blink. Press the button consecutively and the temperature will change in from -14°C to -22°C. After the display blinks for 5 seconds, the temperature setting will be applied.

C. Mode Button

a. RF 4540 S, RF 2336 S, RF 2335 S

Press the button consecutively to choose the mode ECO-HOLIDAY- SUPER FREEZING-USER'S SETTING (no symbol on display).

b. RF 2551 S

Press the button consecutively to choose the mode SMART-ECO-SUPER COOLING-SUPER FREEZING-USER'S SETTING (no symbol on display).


D. Lock Button

Press and hold the button for 3 seconds to lock the other buttons (A, B, C). Press and hold the button for 3 seconds to unlock.

Modes:

1. SMART – your refrigerator will set the temperature of freezer and refrigerator room according to ambient temperature condition.
2. ECO – your refrigerator will operate with the lowest energy consumption. Refrigerator room will be set at 5°C and freezer room will be set at -18°C.
3. HOLIDAY – select this mode if you plan to leave on holiday or vacation for a long period of time. Your refrigerator room temperature will be set automatically to 17°C.
4. SUPER FREEZING – select this mode to freeze the food quickly. After approximately 50 hours, the freezer room setting will return to its previous setting. Tip: Activate this mode 24 hours in advance before putting foods in large quantities.

RF 2255 S

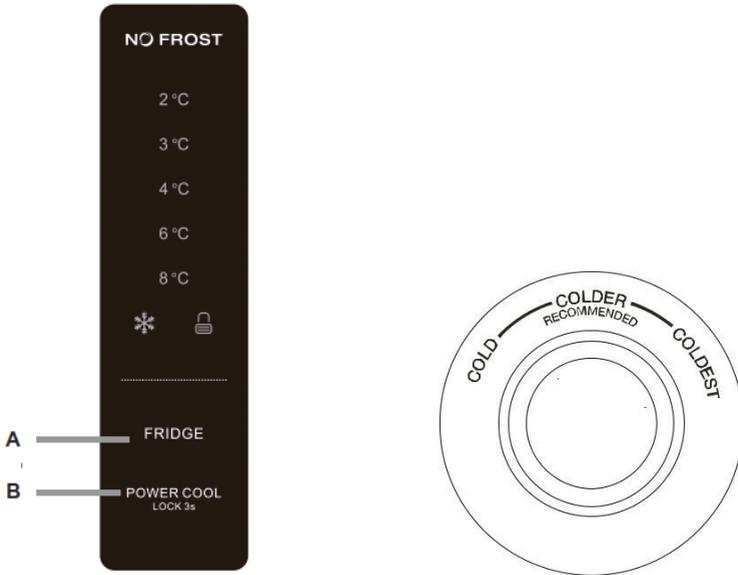

Refrigerator Temperature Setting

A. "Fridge" Button

The refrigerator compartment can be adjusted by touching the button consecutively. Temperature will change in a cycle of "2°C, 3°C, 4°C, 6°C, 8°C". After choosing the temperature and the light flashes for 5 seconds, the settings will be applied

B. "Power cool/Lock" Button

Press the Power Cool button to activate quick cooling. The indicator lamp will turn on and Power Cool mode will be active for 3 hours, and then the settings will return to normal. Press and hold the button for 3 seconds to lock/unlock the buttons

Freezer Temperature Setting

Freezer room can be adjusted to 3 settings: "COLD", "COLDER" and "COLDEST". "COLD" setting is the minimum and "COLDEST" is maximum


Door Alarm

When the door is left open or not closed properly for 90 seconds, the appliance will sound an alarm. Close the doors to turn off the alarm. If the door is not closed properly, the alarm will sound every 35 seconds until the door is closed. If the door remains open for 10 minutes, the LED light will turn off automatically.

Accessories


Movable Shelf

Your appliance is equipped with movable shelves. The wall of refrigerator is equipped with a series of runners so the shelves can be positioned as desired

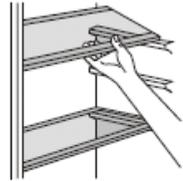

Door Basket

To ease storage of food packages of various sizes, the door shelves can be placed at different heights. To make these adjustments proceed as follows: gradually pull the shelf in the direction of arrows until it comes free, then re-position as required.

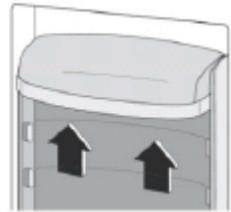

First use

Cleaning the interior

Before using the appliance for the first time, wash the interior and all internal accessories with lukewarm water and some neutral soap so as to remove the typical smell of a brand new product, then dry thoroughly.

IMPORTANT!

Do not use detergents or abrasive powders, as these will damage the finish.

Daily Use

Freezing Fresh Food

- The freezer compartment is suitable for freezing fresh food and storing frozen and deep-frozen food for a long time.
- Place the fresh food to be frozen in the bottom compartment.
- The maximum amount of food that can be frozen in 24 hours is specified on the rating plate.
- The freezing process lasts 24 hours: during this period do not add other food to be frozen.

Storing Frozen Food

When first starting-up or after a period out of use. Before putting the product in the compartment let the appliance run at least 2 hours on the higher settings.

IMPORTANT!

In the event of accidental defrosting, for example the power has been off for longer than the value shown in the technical characteristics chart under "rising time", the defrosted food must be consumed quickly or cooked immediately and then re-frozen (after cooked).

Thawing

Deep-frozen or frozen food, prior to be used, can be thawed in the freezer compartment or at room temperature, depending on the time available for this operation. Small pieces may even be cooked still frozen, directly from the freezer. In this case, cooking will take longer.

Food Storage Tips

Refrigerator

- To reduce humidity and avoid the consequent formation of frost, always store liquids in sealed containers in the refrigerator. Frost tends to concentrate in the coldest parts of the evaporating liquid and, in time, your appliance will require more frequent defrosting.

- Never place warm food in the refrigerator. Warm food should be allowed to cool at room temperature and should be arranged to ensure adequate air circulation in the refrigerator compartment.
- Make sure no items are in direct contact with the rear wall of the appliance as frost will develop and packaging will stick to it. Do not open the refrigerator door frequently.
- We recommend that meat and clean fish are loosely wrapped and stored on the glass shelf just above the vegetable bin where the air is cooler, as this provides the best storage conditions.
- Store loose fruit and vegetable items in the crisper containers. Storing fruit and vegetables separately helps prevent ethylene-sensitive vegetables (green leaves, broccoli, carrot, etc.) being affected by ethylene releasing fruits (banana, peach, apricot, fig etc.).
- Do not put wet vegetables into the refrigerator.
- Storage time for all food products depends on the initial quality of the food and an uninterrupted refrigeration cycle before refrigerator storage.
- To avoid cross-contamination do not store meat products with fruit and vegetables. Water leaking from meat may contaminate other products in the refrigerator. You should package meat products and clean any leakages on the shelves.
- Do not put food in front of the air flow passage.
- Consume packaged foods before the recommended expiry date.
- See Food Storage Guide in Appendix 2

NOTE!

Potatoes, onions and garlic should not be stored in the refrigerator. The table below is a quick guide to show you the most efficient way to store the major food groups in your refrigerator compartment.

Freezer

- The freezer is used for storing frozen food, freezing fresh food, and making ice cubes
- For freezing fresh food; wrap and seal fresh food properly, that is the packaging should be air tight and shouldn't leak. Special freezer bags, aluminum foil polythene bags and plastic containers are ideal.
- Do not store fresh food next to frozen food as it can thaw the frozen food.
- Before freezing fresh food, divide it into portions that can be consumed in one sitting.
- Consume thawed frozen food within a short period of time after defrosting
- Never place warm food in the freezer compartment as it will thaw the frozen food.
- Always follow the manufacturer's instructions on food packaging when storing frozen food. If no information is provided food, should not be stored for ore than 3 months from the date of purchase.
- When purchasing frozen food, make sure that it has been stored under appropriate conditions and that the packaging is not damaged.
- Frozen food should be transported in appropriate containers and placed in the freezer as soon as possible
- Do not purchase frozen food if the packaging shows signs of humidity and abnormal swelling. It is probable that it has been stored at an unsuitable temperature and that the contents have deteriorated.
- The storage life of frozen food depends on the room temperature, the thermostat setting, how often the door is opened, the type of food, and the length of time required to transport the product from the shop to your home. Always follow the instructions printed on the packaging and never exceed the maximum storage life indicated.
- The maximum amount of fresh food (in kg) that can be frozen in 24 hours is indicated on the appliance label.
- See Food Storage Guide in Appendix 2

NOTE!

If you attempt to open the freezer door immediately after closing it, you will find that it will not open easily. This is normal. Once equilibrium has been reached, the door will open easily.

IMPORTANT!

- Never refreeze thawed frozen food.
- The taste of some spices found in cooked dishes (anise, basilica, watercress, vinegar, assorted spices, ginger, garlic, onion, mustard, thyme, marjoram, black pepper, etc.) changes and they assume a strong taste when they are stored for a long period of time. Therefore, add small amounts of spices to food to be frozen, or the desired spice should be added after the food has thawed.
- The storage time of food is dependent on the type of oil used. Suitable oils are margarine, calf fat, olive oil and butter. Unsuitable oils are peanut oil and pig fat.
- Food in liquid form should be frozen in plastic cups and other food should be frozen in plastic folios or bags.

PART 5: MAINTENANCE



Disconnect the unit from the power supply before cleaning.



Do not wash your appliance by pouring water on it.



Do not use abrasive products, detergents or soaps for cleaning the appliance.

After washing, rinse with clean water and dry carefully. When you have finished cleaning, reconnect the plug to the mains supply with dry hands.

- Make sure that no water enters the lamp housing and other electrical components.
- The appliance should be cleaned regularly using a solution of bicarbonate of soda and lukewarm water.
- Clean the accessories separately by hand with soap and water. Do not wash accessories in a dish washer.
- Clean the condenser with a brush at least twice a year. This will help you to save on energy costs and increase productivity.



The power supply must be disconnected during cleaning!

Defrosting

- Your appliance performs automatic defrosting. The water formed as a result of defrosting passes through the water collection spout, flows into the vaporization container behind your appliance and evaporates there.
- Make sure you have disconnected the plug of your appliance before cleaning the vaporization container.
- Remove the vaporization container from its position by removing the screws as indicated. Clean it with soapy water at specific time intervals. This will prevent odors from forming.

LED Lamp Replacement

If your appliance has LED lighting contact the help desk as this should be changed by technician.

Environmental Notice



The packaging material used is recyclable. We recommend that you separate plastic, paper and cardboard and give them to recycling agents. To help preserve the environment, the refrigerant used in this product is R600a (Hydrofluorocarbon - HFC), which does not affect the ozone layer and has little impact on the greenhouse effect.

According to WEEE (Waste of Electrical and Electronic Equipment) guidelines, waste from electrical and electronic devices should be collected separately. If you need to remove of this appliance in the future, do not throw it away with the rest of your domestic garbage. Instead, please take the appliance to the nearest WEEE collecting agents, where available.

PART 6: TROUBLESHOOTING

Problem	Possible Cause	Recommended Action
Refrigerator does not operate	<ul style="list-style-type: none"> • The mains plug of the appliance is not in the socket properly • The fuse for the domestic supply is switched off 	<ul style="list-style-type: none"> • Check whether the power is on; • The fuse must be switched on.
No display on the display panel	<ul style="list-style-type: none"> • The mains plug of the appliance is not in the socket properly • The fuse for the domestic supply is switched off 	<ul style="list-style-type: none"> • Check whether the power is on; • The fuse must be switched on.
Alarm sound	<ul style="list-style-type: none"> • Door is slightly open or not close more than 1 minute 	<ul style="list-style-type: none"> • Close the door completely.
The food is not frozen enough	<ul style="list-style-type: none"> • Temperature is not properly adjusted • Door was opened for an extended period • A large quantity of warm food was placed in the appliance within the last 24 hours • The appliance is near a heat source 	<ul style="list-style-type: none"> • Please look in the initial temperature setting section • Open the door as long as necessary • Adjust the temperature to colder setting temporarily • Please look in the installation section
The compressor do not work	<ul style="list-style-type: none"> • It is under defrosting mode • Power is not connected well 	<ul style="list-style-type: none"> • It is normal for defrosting • Check whether the power is connected well.
Compressor runs too long	<ul style="list-style-type: none"> • The fridge has recently been dis-connected for a period of time 	<ul style="list-style-type: none"> • It takes some hours for the fridge to cool down completely. • Hot food will cause the fridge to run

Problem	Possible Cause	Recommended Action
	<ul style="list-style-type: none"> • Put too much fresh or hot food • Doors are opened too frequently or too long 	<p>longer until the desired temperature is reached.</p> <ul style="list-style-type: none"> • Warm air entering the fridge cause it to run longer. Open the door less often.
Vibrations	<ul style="list-style-type: none"> • Floor is uneven or weak. Refrigerator rocks on the floor when it is moved slightly. • The refrigerator is touching the wall. 	<ul style="list-style-type: none"> • Check to assure that the refrigerator is on a level surface. • Re-level the refrigerator and move it from the wall

PART 7: SPECIFICATION

Model	RF 4540 S	RF 2551 S
Color	Black Stainless	Stainless
Type	Multi door	Side by side
No. of doors	4	2
Defrosting	Automatic	Automatic
Compressor	Inverter	Inverter
Refrigerant	R600a	R600a
Interior light	LED	LED
Total Capacity (Liter)	460	516
Refrigerator Capacity (Liter)	307	339
Freezer Capacity (Liter)	153	177
Defrost power input (Watt)	200	250
Rated Voltage (Volt)	220-240	220-240
Rated Frequency (Hz)	50	50
Product dimension (W×D×H)(mm)	790x700x1800	905x655x1770
Product weight (kg)	85	95

**S = Stainless, R = Red, C = Cream, O = Orange, N = Green, U = Blue, W = White, V = Silver, G = Grey, L = Black*

Design and specification can change without prior notice to improve the quality of the product. The illustration in this manual is schematic and can be different with your actual product. The values on label or in other documents are according to laboratory test and relevant standards. Values can vary depending on the actual operational and environmental condition of the product.

Model	RF 2255 S	RF 2336 S
Color	Black Stainless	Black Stainless
Type	Top freezer	Bottom freezer
No. of doors	2	2
Defrosting	Automatic	Automatic
Compressor	Inverter	Inverter
Refrigerant	R600a	R600a
Interior light	LED	LED
Total Capacity (Liter)	510	335
Refrigerator Capacity (Liter)	395	220
Freezer Capacity (Liter)	115	115
Defrost power input (Watt)	220	160
Rated Voltage (Volt)	220-240	220-240
Rated Frequency (Hz)	50	50
Product dimension (W×D×H)(mm)	790x680x1780	600x690x1950
Product weight (kg)	80	68

**S = Stainless, R = Red, C = Cream, O = Orange, N = Green, U = Blue, W = White, V = Silver, G = Grey, L = Black*

Design and specification can change without prior notice to improve the quality of the product. The illustration in this manual is schematic and can be different with your actual product. The values on label or in other documents are according to laboratory test and relevant standards. Values can vary depending on the actual operational and environmental condition of the product.


Model	RF 2335 S
Color	Black Stainless
Type	Bottom freezer
No. of doors	2
Defrosting	Automatic
Compressor	Inverter
Refrigerant	R600a
Interior light	LED
Total Capacity (Liter)	315
Refrigerator Capacity (Liter)	199
Freezer Capacity (Liter)	116
Defrost power input (Watt)	160
Rated Voltage (Volt)	220-240
Rated Frequency (Hz)	50
Product dimension (W×D×H)(mm)	600x690x1850
Product weight (kg)	65

**S = Stainless, R = Red, C = Cream, O = Orange, N = Green, U = Blue, W = White, V = Silver, G = Grey, L = Black*


Design and specification can change without prior notice to improve the quality of the product. The illustration in this manual is schematic and can be different with your actual product. The values on label or in other documents are according to laboratory test and relevant standards. Values can vary depending on the actual operational and environmental condition of the product.

APPENDIX 1: DOOR INSTALLATION GUIDE RF 2336 S & RF 2335 S


Before reversing the door, please prepare the following tools and materials: slot screw driver (-), phillips screwdriver (+), spanner, and other components included in the poly bag:

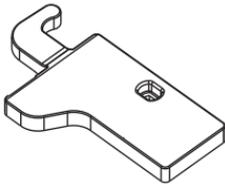

1 x Hinge cover


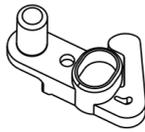


1 x Upper door plastic hinge base

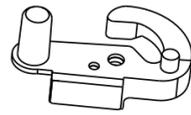


1 x Lower door plastic hinge base



1. Unscrew the top hinge cover and unplug the door switch connector and harness

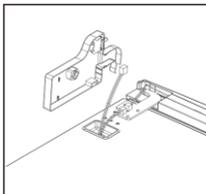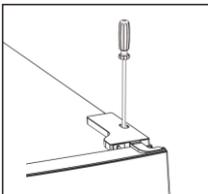



2. Unscrew top hinge

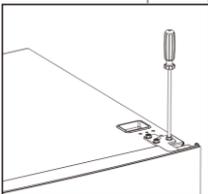

3. Remove the pin with a screwdriver and flip the hinge bracket. Then refit the pin to the hinge bracket

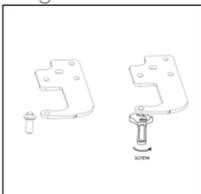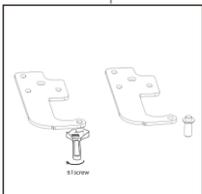




4. Move the door switch from right hinge cover to the left hinge cover

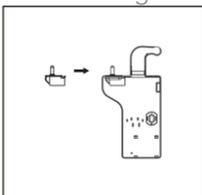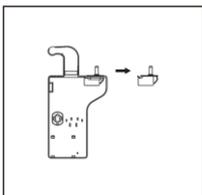


5. Detach the upper door cover and move harness from right to left side, then replace the cover




6. Move the top left cover to right side

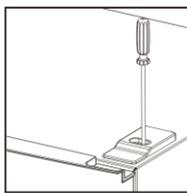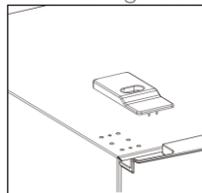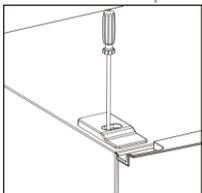


7. Take off the upper door, take out the screw from the center hinge with phillips screwdriver, then take off the lower door

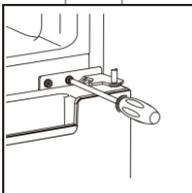


8. Move the hinge hole covers from left to right side

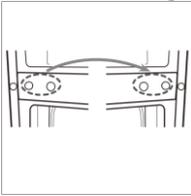


9. Unscrew bottom hinge. Then remove the adjustable feet from both sides

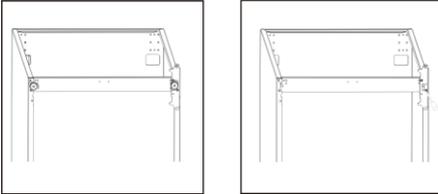


10. Unscrew and remove bottom hinge pin, turn the bracket over and replace it

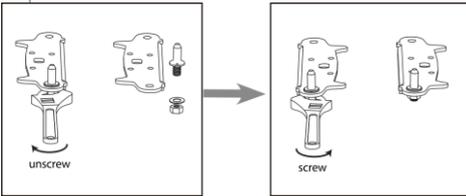


11. Refit the bracket fitting the bottom hinge pin. Replace both adjustable feet

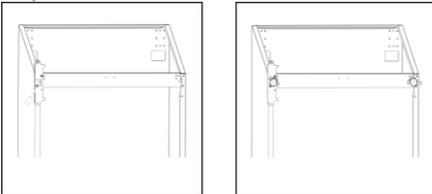

12. Remove aid-closers from bottom of upper and lower doors, then take out new aid-closers from accessory bag and install them to the left side

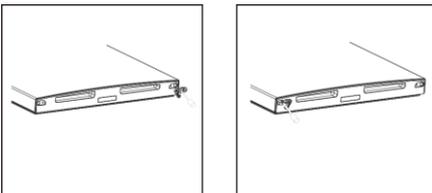

13. Detach the refrigerator and freezer gasket, and the attach them after rotating

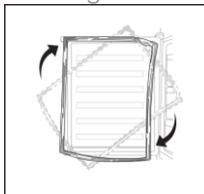

APPENDIX 2: FOOD STORAGE GUIDE

Meat & Fish	Preparation	Maximum storage time (months)
Steak	Wrap in foil	6-8
Lamb meat	Wrap in foil	6-8
Veal roast	Wrap in foil	6-8
Veal cubes	In small pieces	6-8
Lamb cubes	In pieces	4-8
Minced meat	In packaging without spices	1-3
Giblets (pieces)	In pieces	1-3
Bologna sausage/salami	Should be kept packaged even if it has a membrane	
Chicken and turkey	Wrap in foil	4-6
Goose and duck	Wrap in foil	4-6
Deer, rabbit, wild boar	In 2.5 kg portions or as fillets	6-8
Freshwater fish	After cleaning the bowels and scales of the fish, wash and dry it. If necessary, remove the tail and head.	2
Lean fish		4
Fatty fish		2-4
Shellfish	Clean and in a bag	4-6
Caviar	In its packaging, or in an aluminium or plastic container	2-3
Snails	In salty water, or in an aluminium or plastic container	3

NOTE!

Thawed frozen meat should be cooked as fresh meat. If the meat is not cooked after defrosting, it must not be re-frozen

Vegetables and Fruits	Preparation	Maximum storage time (months)
String beans and beans	Wash, cut into small pieces and boil in water	10-13
Beans	Hull, wash and boil in water	12
Cabbage	Clean and boil in water	6-8
Carrot	Clean, cut into slices and boil in water	12
Pepper	Cut the stem, cut into two pieces, remove the core and boil in water	8-10
Spinach	Wash and boil in water	6-9
Cauliflower	Remove the leaves, cut the heart into pieces and leave it in water with a little lemon juice for a while	10-12
Eggplant	Cut into pieces of 2cm after washing	10-12
Corn	Clean and pack with its stem or as sweet corn	12
Apple and Pear	Peel and slice	8-10
Apricot and Peach	Cut into two pieces and remove the stone	4-6
Strawberry and blackberry	Wash and hull	8-12
Cooked fruits	Add 10 % of sugar to the container	12
Plum, cherry, sourberry	Wash and hull the stems	8-12

	Maximum storage time (months)	Thawing time at room temperature (hours)	Thawing time in oven (minutes)
Bread	4-6	2-3	4-5 (220-225°C)
Biscuits	3-6	1-1,5	5-8 (190-200°C)
Pastry	1-3	2-3	5-10 (200-225°C)
Pie	1-1,5	3-4	5-8 (190-200°C)
Phyllo dough	2-3	1-1,5	5-8 (190-200°C)
Pizza	2-3	2-4	15-20 (200°C)

Dairy products	Preparation	Maximum storage time (months)	Storage conditions
Packet (homogenized)	In its own packet	2-3	Pure Milk – in its own packet
Cheese - excluding white cheese	In slices	6-8	Original packaging may be used for short-term storage. Keep wrapped in foil for longer periods.
Butter, margarine	In its packaging	6	

Ciao! **MODENA**

www.modena.com