

User Manual Book

Robot Vacuum Cleaner

RV 6040 GXBK

TABLE OF CONTENT

Part 1: Important Safety Information	3
Safety Instruction	3
Warning	4
Part 2: Product Introduction	5
Product Components	5
Front of the Robot	6
Back of the Robot	6
Charging Dock	6
Dust Box	7
Water Tank	7
Remote Controller	7
Part 3: How to Use	8
Charging	8
Turning On and Off	9
Cleaning	10
Time Scheduling Setting	11
Using the Water Tank	11
Part 4: Maintenance	12
Dust Box	12
Water Tank and Mop	13
Water Tank Dust Bin	14
Roller and Side Brush	14
Charging Dock, Ground Sensors, and Wheels	15
Part 5: Troubleshooting	16
Part 6: Specification	17
Part 7: Apps Usage	18

This manual book explains everything you need to know about your new product. Please contact our Customer Care should you need further assistance through www.modena.com.

PART 1: IMPORTANT SAFETY INFORMATION

Before using this product, please read following safety instructions carefully and follow all safety precautions. Any operation inconsistent with this instruction manual may cause damage to the product.

Safety Instruction

1. Only authorize technicians can disassemble this product. User are not recommended to disassemble this product by themselves.
2. This product can only use the power adapter provided by the factory. If other adapters are used, the product maybe damaged.
3. Do not touch wires, sockets, or adapter by wet hands.
4. Do not allow cloth curtains or body parts to roll into the product drive wheels.
5. Do not place this product near cigarette butts, lighter, and other smoldering fires.
6. Please clean the product after charging.
7. Do not bend wires excessively or place heavy objects and sharp object on the device.
8. This product is indoor household product. Do not use it outdoor.
9. Do not sit on the product.
10. Do not use this product in wet environment, e.g. bathroom.
11. Before using this product, please remove all vulnerable items, e.g. glasses, lamps, etc., on the ground as well as items that may entangle the side brushes and air suction passage, e.g. wires, paper sheets, cloth, etc.
12. Do not put this product in a place where is easy to fall, e.g. on table, deck, or chair.
13. Please carefully check whether the power adapter is connected to the socket before using, otherwise the battery maybe damaged.
14. To prevent tripping, please inform other house members when it works.
15. Please empty the dust box before using this product if it is full.
16. The ambient temperature use of this product is 0 to 40°C.
17. Do not use this product in high temperature environment (more than 40°C).
18. Please remove the battery from the device before the product is scrapped.


19. Please make sure that this product is not powered on when removing the battery.
20. Please recycle the discarded batteries safely.

Warning


1. Use only the original rechargeable battery and charging dock specially equipped by the manufacturer. Non-rechargeable batteries are strictly prohibited. Please refer to the "Specification" section for battery specification information.
2. It is forbidden to use the product in environment with open flame or fragile objects.
3. It is forbidden to use the product in extremely hot (above 40°C) or extremely cold (below 0°C).
4. It is forbidden for human hair, clothes, fingers, and other objects to approach the opening and operating parts of the product.
5. It is forbidden to use the product on wet or stagnant ground.
6. It is forbidden to use the product to absorb any objects, such as stones and waste paper, that may clog it.
7. It is forbidden to use the product to absorb any flammable substances, such as petrol and toner (for printers or photocopies). Do not use the product in clean area with flammable materials.
8. It is forbidden to use the product to absorb any burning articles, such as cigarettes, matches, ashes, and other articles that may cause fire.
9. It is forbidden to place any articles at the suction port. Do not use the product when the suction port is blocked. Clean up the duct from cotton wool, hair, etc. at the suction port to ensure smooth air circulation at the suction port.
10. Use the power cord carefully to avoid damage. It is forbidden to use the power cord to drag or pull the product and the charging dock, use it as handle, clamp it in the door gap, or pull it at sharp corners.
11. Do not place the power cord and charging dock near to heat source.
12. Do not use damaged charging dock.
13. Even the product has been severely damaged, burning the product is strictly prohibited. It may lead the explosion of the battery in the product.

PART 2: PRODUCT INTRODUCTION

Product Components

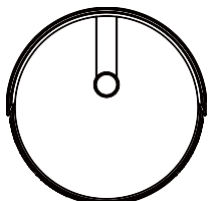


Robot

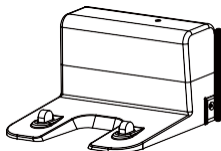


Charging Dock



 Remote Control



Water Tank

 


Dust Box




Mopping Pad



 
Cleaning Brush




Side Brushes

 


Power Adapter

 

Warranty Card

 


HEPA Filter


 


Batteries


Front of the Robot

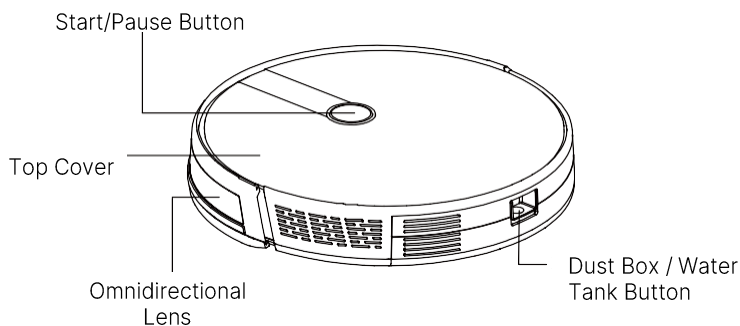


Back of the Robot

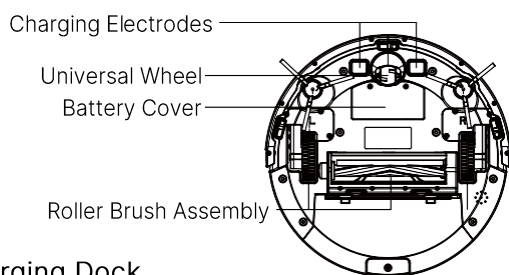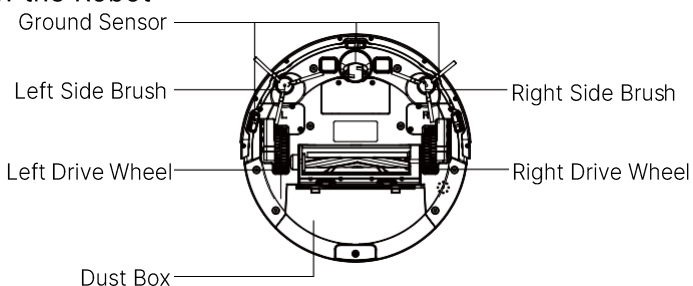


Charging Dock

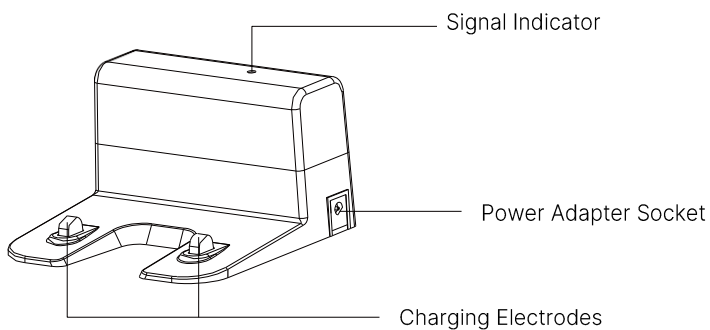


Dust Box

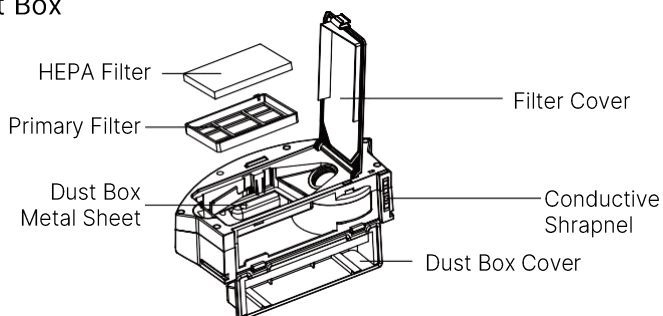

Water Tank

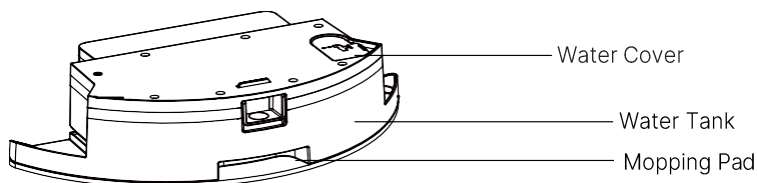


Remote Controller

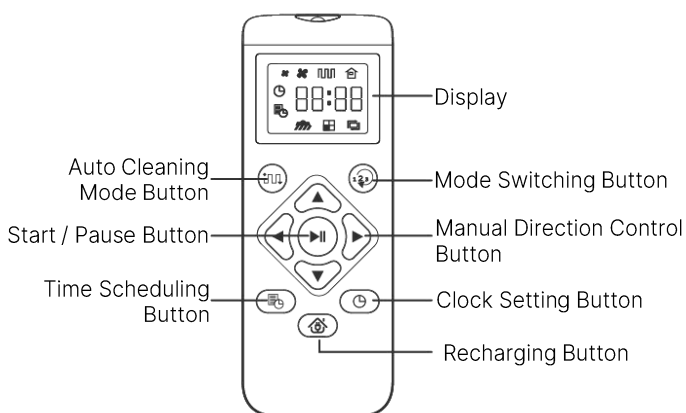


PART 3: HOW TO USE

Note: Before using, remove the protective strip on the robot.

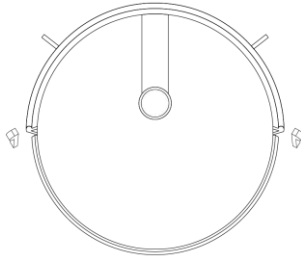


Charging


1. Place the charging dock against the wall and on flat floor. Do not place any objects within the range 0.5 m from the left and right and 1.5 m from the front.

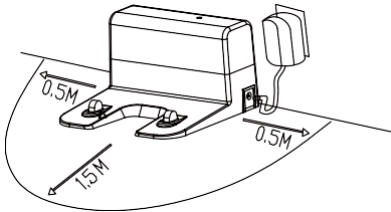


2. Connect the power supply.
3. Install the side brushes according to the left and right positions respectively.

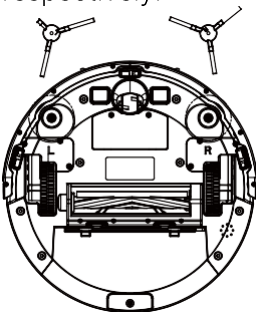

Place the robot on the charging dock for charging. Charging indicator will flash during the charging process and always on when charging


finished. Charging time is about 5 – 6 hours. During the cleaning process, the robot can sense if the power is insufficient and it will automatically return to the charging dock to recharge. User can also command the robot to start the recharging mode through the back charging key  of the remote controller

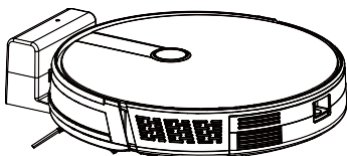

Charging Attention:

- Do not use charging dock in highly reflective environments, such as a room which exposed to direct sunlight or with mirror nearby. If there is any object with strong reflection, please cover it 7 cm from the bottom.
- To ensure normal working time of the robot, fully charge it before first use.
- To ensure the safety of charging and prevent the damp cloth from damaging the floor, remove the water tank before charging the robot.

Turning On and Off

1. Power On : Hold down the robot's On/Off Button for 3 seconds. The robot will beep and the power indicator will light up. It will enter standby mode.
2. Pause : Press the On/Off Button on the running robot or the Pause Button  on the remote control to pause the robot. Press it once again to continue working.
3. Sleep Mode : The robot will go into sleep mode after being rested and paused for more than 10 minutes. All robot lights will be off. Press the On/Off Button on the robot or remote control to wake it up from the sleep mode.
4. Power Off : Press and hold the robot's On/Off Button until the power light turns off.


Note:

- It is recommended to keep the robot in state of charging after cleaning is finished, so it will be fully charged for next use.


Cleaning

The robot has some cleaning modes to meet user needs. User can choose an appropriate mode by using remote control or Apps.


1. Automatic Cleaning

- Application: the robot will clean the room automatically by following a zigzag path.
- Configuration: On standby mode, press the On/Off Button on the robot or the Auto Cleaning Button  on the remote control or on the Apps.


2. Single Room Cleaning

- Application: this mode is used to clean specific room. The maximum cleaning area is 4 x 4 m around the robot. When cleaning is completed, the robot will return to the charging dock automatically.
- Configuration: Press the remote controller mode switching button , then select the single room cleaning mode.

3. Spot Cleaning

- Application: to clean a specific dirty area repeatedly. The robot will move in spiral path to clean the area and return to the starting point when cleaning is completed.
- Configuration: Press the remote controller mode switching button , then select the spot cleaning mode.

4. Edge Cleaning

- Application: for indoor border cleaning, the robot will clean along the perimeter of fixed objects (such as walls) and return to the charging station after finished.
- Configuration: Press the remote controller mode switching button , then select the edge cleaning mode.

5. Manual Cleaning




- Application: manual control cleaning by user.
- Configuration: press the  button on the remote control or Apps to control the robot's movements, such as moving forward, backward, or turning.

 


6. Mopping

- Application: to do wet & dry mopping.
- Configuration: install the water tank and mopping pad to the robot and press the On/Off button on it.

- Note: if the water tank is not installed, when user pressing the mopping button, the robot will sense that the water tank is not installed, and it will not work.

Time Scheduling Setting

Press the remote controller time scheduling button  to set the robot time scheduling. Then press the key  to set the scheduling time. Press the button  again to confirm the setting. The robot will automatically clean up at the reserved time of each day.


Note: before setting the schedule, user has to set the time first. Press the clock setting button , then press the key  to set the time. Press the clock setting button  once again to confirm the setting.

Using The Water Tank


Do not use the floor mopping function on carpets.

Note: after mopping the floor, please empty the water tank and remove the mopping pad.


1. Add water

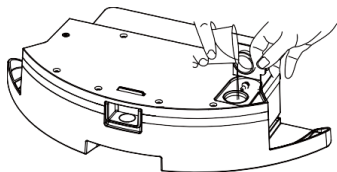


2. Install the Water Tank

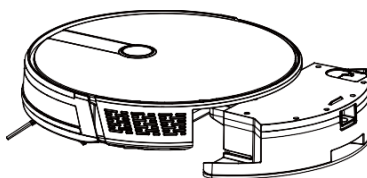

3. Install Mopping Pad

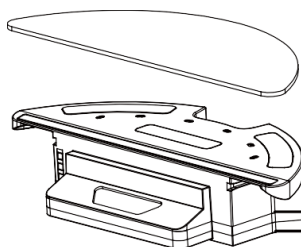



4. Start Mopping the Floor

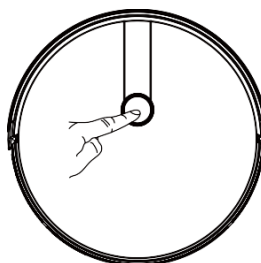


PART 4: MAINTENANCE

Dust Box


1. Press the dust box button to take it out.
2. Open the box Side Cover.

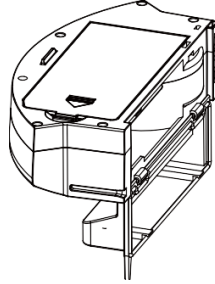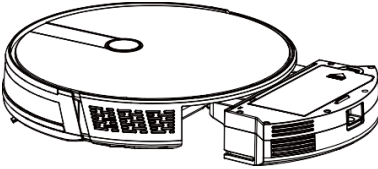


3. Dump the trash.

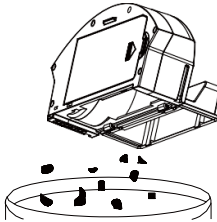


4. Open the HEPA filter cover.

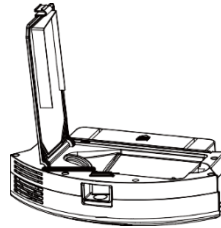


5. Take out the HEPA and primary filter. It is not recommended to wash the HEPA filter by water. Tap gently to remove the dust.

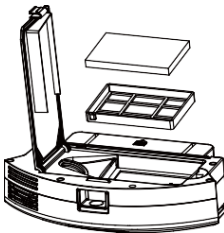


6. Rinse the primary filter.

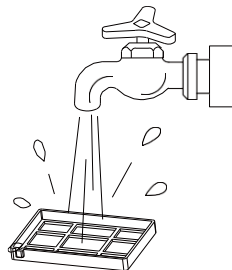

7. Scrub the dust box with dry mop.

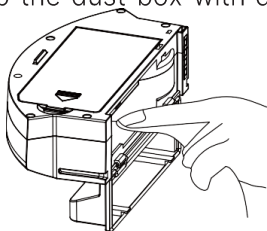

8. Dry the dust box and filter assembly and keep it dry to ensure its service life.

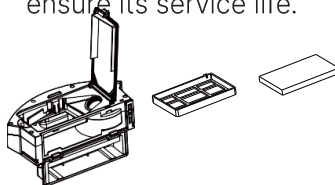

9. Put the HEPA & primary filter back into the dust box.

Note:


- Before re-install the filter, please ensure that the HEPA & primary filter are in dry state
- Do not expose the HEPA and primary filter to direct sunlight.

10. Close the dust box cover and install the dust box into the robot.


Note: Do not allow water to seep into the fan port when cleaning.

Water Tank & Mop


1. Take out the water tank assembly.

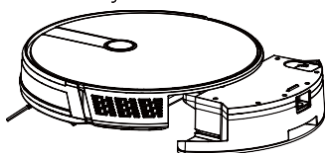

2. Remove the mop.

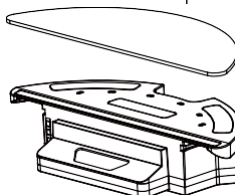


3. Empty the water tank.

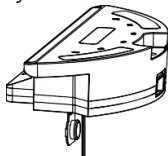


4. Wash the mop.



5. Dry the mop in sunlight.

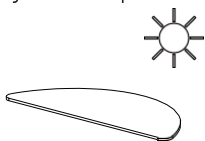


6. Dry or naturally dry the water tank.

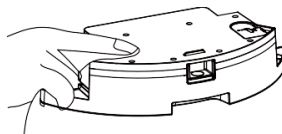


Water Tank Dust Bin


1. Put the water tank horizontally with the dustbin port upside.

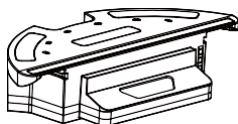

2. Clean up the rubbish in the dustbin of the water tank with running water

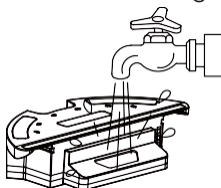


3. Dry up the conductive shrapnel

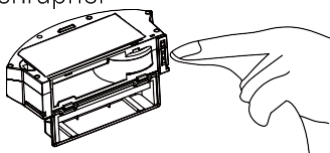


Roller & Side Brush

1. Open the roller brush cover assembly.

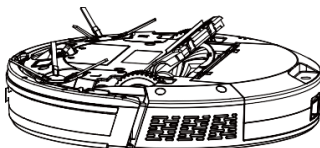


2. Take out the roller brush shaft.

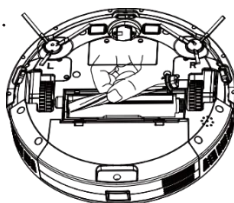

3. Use the cleaning brush to cut off the hair tangled on the roller brush.





4. Clean the side brush.

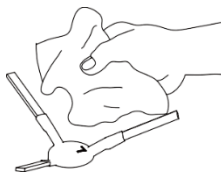


Charging Dock, Ground Sensors, and Wheels

Note: The interior of the charging dock pole, the ground sensors, and the front bumper all contain sensitive electronic components. Please use dry mop to clean the above parts and do not use wet mop to prevent damage caused by water inflow.

1. Clean the charging dock electrodes.

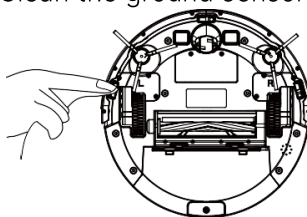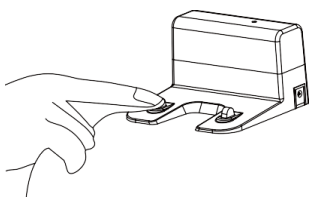

3. Clean the drive wheels and universal wheel.

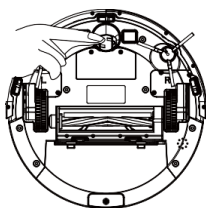

Note: If the product will not be used for a long time, please fully charge it before storing. Turn off the robot and charge it every 3 months to prevent the battery from over discharged.

If the battery is over discharged or is not used for a long time, the product may not be able to be charged. Please contact MODENA Service Center. Do not disassemble it by yourself.

PART 5: TROUBLESHOOTING

If robot has a problem, it will make some prompt tone to notice the user. Please check below table for the list of prompt tone, possible cause, and recommended actions.

Prompt Tone	Problem	Recommended Actions
<i>Wheels off the ground</i>	Wheels off the ground / Robot suspended	Put the robot back to the ground and press the cleaning button again.
<i>Dust box not installed</i>	Dust box is not installed or removed	Replace the dustbin to the robot and press the cleaning button again.
<i>Battery failure</i>	Abnormal battery charging	Contact MODENA Service Center to test the battery.
<i>Please check if the wheel is stuck</i>	Wheel is stuck / jammed	Check whether the wheel is entangled with foreign objects and clean up the entangled objects.
<i>Please check if the front collision is stuck</i>	Front bumper is stuck.	Check whether the front bumper can be bounced normally.
<i>Robot connection failed</i>	Robot is failed to connect to server.	Check whether the wireless network connected during distribution can connect to the internet.
<i>The battery is low, please charge the machine.</i>	Battery power less than 20%.	Charge the robot.
<i>Please check whether the side brush is tangled or jammed.</i>	Side brush is tangled or jammed.	Check whether the side brush is twined by wire or hair and clean up the wire or hair.
<i>Please move the machine to the open area</i>	Robot is failed to get out trouble.	Move the robot to an empty place and press the cleaning key again.

PART 6: SPECIFICATIONS

Model	RV 6040 GXBK
Type of Product	Robot Vacuum Cleaner
Navigation Type	Gyroscope
Color	Black
Dust Box Capacity	0.6 L
Water Tank Capacity	0.35 L
Motor Power	28 W
Battery Capacity	2500 mAh
Battery Voltage	14.4 V
Suction	2000 Pa
Charging Time	4-5 hours
Working Time	100 – 120 mins
Dimension	Ø330 x76 mm

Specifications of this appliance may change without notice to improve the quality of the product. Pictures in this manual are schematic and may not match your product exactly. Values stated on the robot labels or in the documentation accompanying it are obtained in laboratory in accordance with the relevant standards. Depending on operational and environmental conditions of the appliance, values may vary.


PART 7: APPS USAGE

1. Download “MODENA Smart” Apps from Google Playstore or Apple App Store on your smartphone.



MODENA Smart
MODENA Indonesia

2. Use email address or phone number to register. Follow the steps on the Apps.
3. Click “Add Device” or “+” sign at the right top corner, then choose “Robot Vacuum”, and click “MODENA RV 6040 GXBK”.

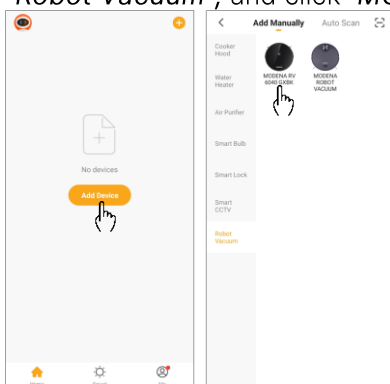

4. Connect the phone to WiFi network, input the network name and password, then click “Next”.


Note: The device can only connect to 2.4 GHz WiFi network.




5. Turn the robot on by pressing the Power button for 3 seconds, then press again the Power button 2 times fast until the WiFi indicator blinking rapidly and the voice prompt says “connecting to network”.




6. Tick on “Confirm icon is flashing” on the Apps then click “Next”.

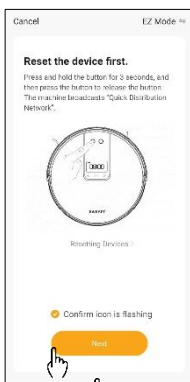

7. Wait for the process to complete and sound voice prompt “WiFi connected”, then click “Done”.

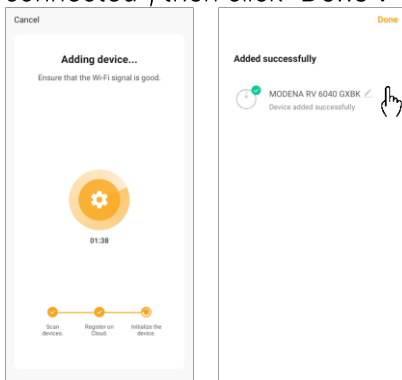

8. The “MODENA Smart” Apps is ready to use to control the device.

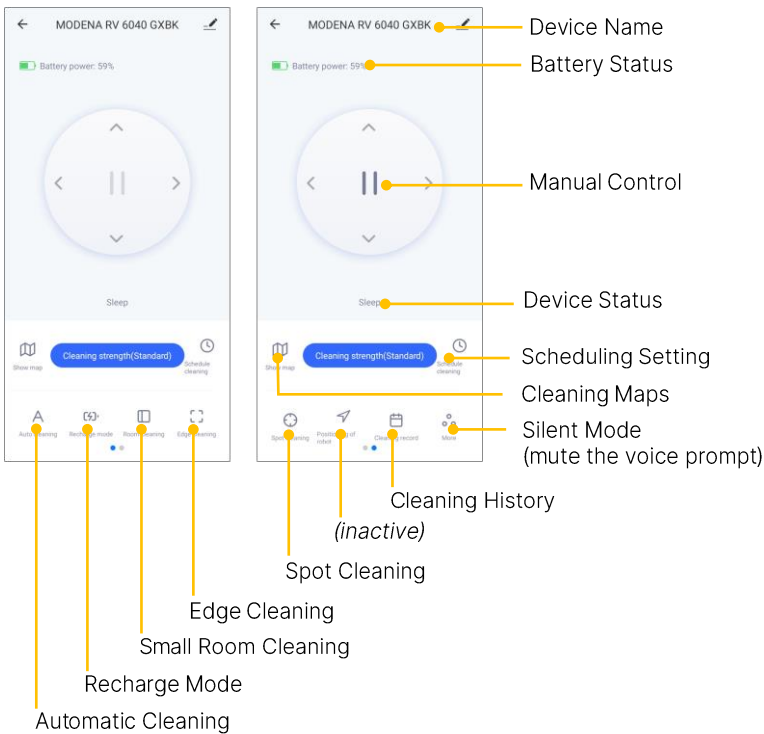

MODENA