

MODENA

User

Manual Book

Twin Tub Washing Machine

WT 1081 WTM

WT 1200 WTM


WT 2012 WTM

TABLE OF CONTENTS

PART 1: NAME OF PARTS.....	3
WT 1081 WTM.....	3
WT 1200 WTM.....	4
WT 2012 WTM.....	5
PART 2: INSTALLATION	6
Wiring Diagram of WT 1081 WAM & WT 1200 WAM.....	7
Fixed Legs Installation of WT 2012 WTM.....	8
PART 3: HOW TO USE	9
Operating Instruction for WT 1081 WTM & WT 1200 WTM.....	10
Operating Instruction for WT 2012 WTM.....	12
PART 4: MAINTENANCE	15
WT 1081 WAM & WT 1200 WAM	15
WT 2012 WTM.....	16
PART 5: TROUBLESHOOTING	17
PART 6: SPECIFICATIONS.....	17
APPENDIX 1: INTERNATIONAL TEXTILE CARE LABEL.....	17
APPENDIX 2: USEFUL INSTRUCTIONS IN REMOVING THE STAIN.....	17



PART 1: NAME OF PARTS

WT 1081 WTM

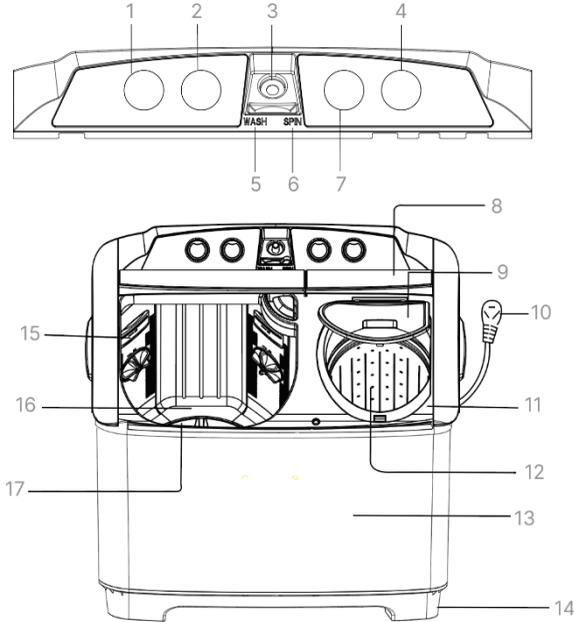


- | | | |
|-----------------------|------------------------|---------------------|
| 1. Wash timer knob | 7. Program timer knob | 13. Machine cabinet |
| 1. Wash selector knob | 8. Outer spin-dry lid | 14. Base |
| 2. Water inlet | 9. Middle spin-dry lid | 15. Lint filter |
| 4. Spin timer knob | 10. Power cord | 16. Wash tub |
| 5. Wash | 11. Spin-dry hatch | 17. Pulsator |
| 6. Spin | 12. Spin-dry basket | |

WT 1200 WTM

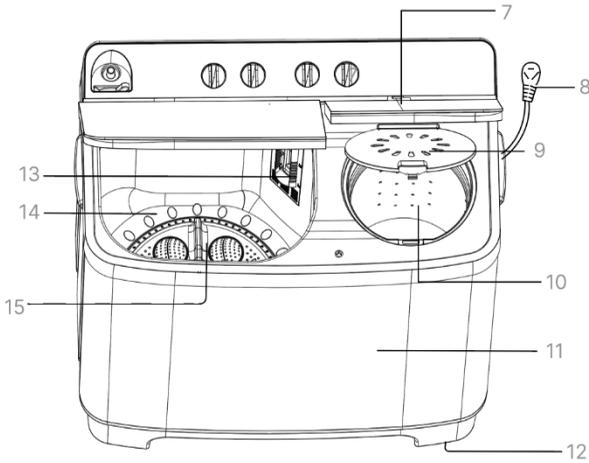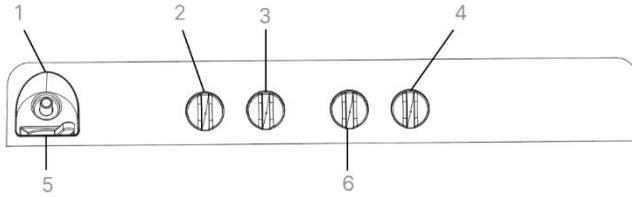

- | | | |
|-----------------------|------------------------|--------------|
| 1,2. Water inlet | 8. Power cord | 13. Wash tub |
| 3. Wash selector knob | 9. Middle spin-dry lid | 14. Pulsator |
| 3. Spin timer knob | 10. Spin-dry basket | |
| 5. Wash/Spin | 11. Machine cabinet | |
| 6. Program timer knob | 12. Base | |
| 7. Outer spin-dry lid | 13. Lint filter | |

WT 2012 WTM

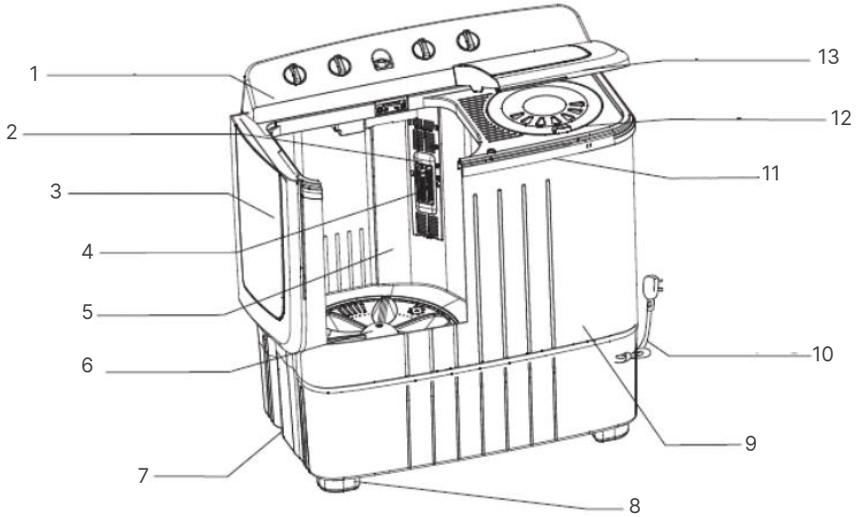

- 1. Control Panel
- 2. Waterfall Outlet
- 3. Wash Cover
- 4. Lint Filter
- 5. Wash Tub
- 6. Pulsator

- 7. Base
- 8. Fix Legs
- 9. Case
- 10. Power Plug
- 11. Frame
- 12. Safety Cover


- 13. Spin Cover

PART 2: INSTALLATION

Direction Of Washing Machine Placement

- Locate washing machine at a stable level surface (allow maximum oblique angle to 2°).
- Keep the washing machine more than 5 cm from the wall to prevent a noisy sound while spinning.
- A carpet must not obstruct the ventilation openings.

Connecting The Drain Hose

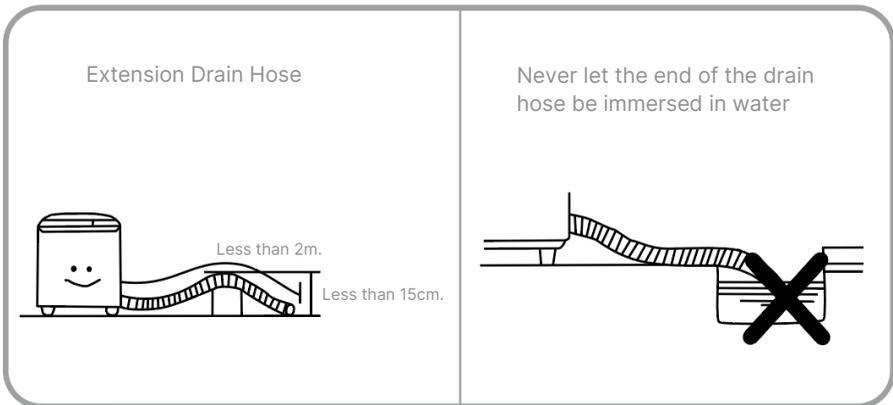



Connecting Power and Grounding

- Washer earth wire is connected to the power and plug. Don't alter it.
- The power socket must install earth wire secured.
- The appliance must be positioned where the plug is accessible.

CAUTION

- Never connect the earth wire to a gas pipe, a water tap pipe, a phone wire or lighting rod.
- Do not use it in case, the power cord or plug have been damaged. To avoid electric shock and fire risk.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a qualified person in order to avoid hazard.


Wiring Diagram of WT 1081 WAM & WT 1200 WAM With Pump Without Pump

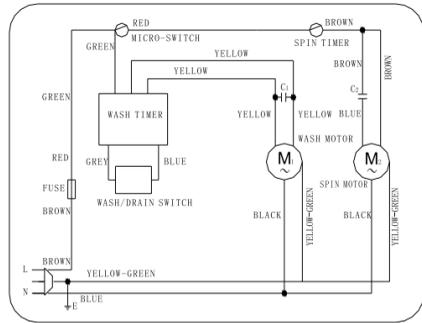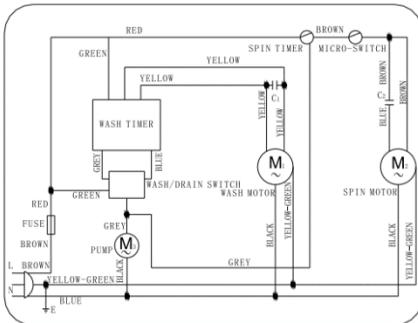


No pump

Fixed Legs Installation of WT 2012 WTM


1. Take away this wash cover

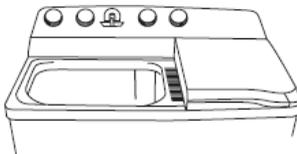

2. Lay down the machine on a soft sheet with front side on the ground

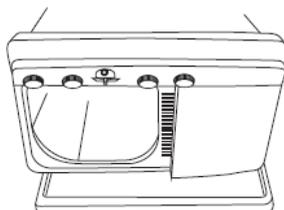

3. Install 5 feet onto the bottom of the machine

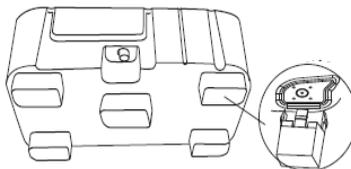

PART 3: HOW TO USE

Preparation Before Washing



- Make sure to remove things such as keys, pins and coins from the laundry.



- Wash oily or dyed laundry separately.



- Wash fuzzy laundry by its inner side.



- Wash delicate clothes, wrapping them in a nylon net.



- Insert the plug completely.
- Take down the drain hose.
- Connect the inlet hose.


Operating Instruction for WT 1081 WTM & WT 1200 WTM

Washing

1. Set the "PROGRAM SELECTOR" to "Wash" position.
2. Turn on the water tap, let water flows into the tub in accordance with the amount of clothing to be washed. (The marks H. M. L in tub are high, medium, low water level.)
3. Add the proper amount of detergent.
4. Put clothes in the wash tub, one cloth at a time.



5. Turn the "WATERFLOW SELECTOR" to select the water flow in accordance with the fabric type of the clothes.

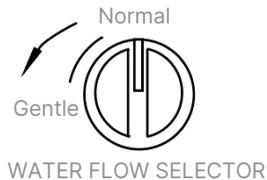

6. Turn the "WASH TIMER" knob to the desired wash time clockwise, then washing process will start.



7. After washing is completed, drain the water by setting the "PROGRAM SELECTOR" to the "Drain" position.



Spin Drying

1. Transfer the clothing to the spin-dry tub and place the spinner cap on top of the clothing.
2. Close the inner and outer spin-dryer lids.
3. Turn the "SPIN TIMER" knob to the desired dry time clockwise, the spin dry will commence.

Type of the clothes	Spin-drying time
Shirts (synthetic)	1-2 min
Undershirt	3-5 min
Work clothes	5 min

Elongate The Functionality of Washing Machine

1. Remove the power plug after washing.
2. Wipe the washer with a piece of clean and dry with a soft cloth.
3. Must clean tubs after bleaching or starching, otherwise, some residue will be generated.
4. Take down the lint filter for cleaning.

Washing Time Duration Based on Fabric Types

WASH ACTION	Gentle	Normal	Powerful
FABRIC TYPE	Synthetics Fabrics Wools	Linen Cotton Work clothes	Very dirty clothing
WASHING TIME	3-5min	5-12min	10-15min

Operating Instruction for WT 2012 WTM


Washing

1. Insert the inlet hose into the wash inlet on the control panel and turn on the tap.
2. Set the wash selector knob (Normal or Gentle) according to the texture of clothes.
3. When filling water to half of the specified water level, add the detergent and stir. Put in washing materials (turn off the tap and soak for a while), and then fill water to the water level and turn off the tap.
4. Turn the wash timer knob to the selected time position for washing.
5. After washing, set the cycle selector knob to the Drain position for draining.

Rinsing

1. To save time, water, and energy, please do the spinning work before rinsing. After spinning, put the clothes into the washtub.
2. Insert the inlet hose into the wash inlet on the control panel and turn on the tap.
3. Set the wash selector knob to the "Normal" or "Gentle" position according to the texture of clothes.
4. Select the water level based on the washing volume.
5. After filling water to the level, turn off the tap to save water.

6. Turn the wash timer knob to the selected time for rinsing.

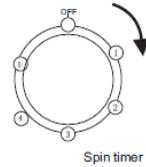

7. After rinsing, put washing materials into the spin tub to spin for 1 to 3 minutes.

8. Drain out the rinsing water in the washtub.


9. According to the turbidity degree of rinsing water, materials can be rinsed several times. Spin and dry after washing.

Spin Drying

1. Shake out washing material and put them into the spin tub




2. To save time, water, and energy, please do the spinning work before rinsing. After spinning, put the clothes into the washtub.

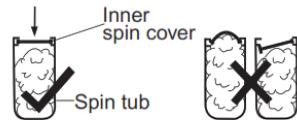

Correct

Incorrect

3. Cover the safety cover and spin cover.

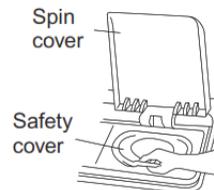

4. Refer to the following table to select the spinning time of spin timer.

Washing Materials	Spinning Time
Thin clothes (fiber/blend)	About 1 minute
Knitwear (fiber)	About 1 – 2 minutes
Underwear (cotton)	About 2 – 3 minutes
Slipover (cotton/linen)	About 3 – 4 minutes
Toweling Coverlet (cotton)	About 4 – 5 minutes

CAUTION

- If strong vibration occurs in the spin tub, open the spin cover immediately. Make sure that the washing machine is placed on a flat, stable floor, and then readjust and distribute the washing material evenly.
- To do spinning and draining together, please spin for 1 minute before draining.

PART 4: MAINTENANCE

WT 1081 WAM & WT 1200 WAM

Do not expose the washing machine to a direct sun light or rain.



Do not install the washing machine around a damp place.



Do not sprinkle water over switches.



Let water drain away from the drain hose thoroughly.




When plugging out the power cord, do not hold the wire.



Keep children away from the washing machine.



Keep the washing machine away from fire or heat source.

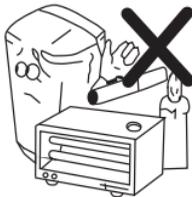

Do not wipe the washer with the volatile material, gasoline, etc.



Do not pour over 50°C water into the tub.



WT 2012 WTM



After you use the washing machine, wipe the moisture and stains on its surface with a soft cloth. To avoid damage on plastic surface, do not use cleaning agents.



To clean up the Lint Filter, Press the buckle and pull out the lint filter component and close it again after emptying it. To install, insert the projecting part of the lint filter component into the waterfall outlet and push up the buckle.



PART 5: TROUBLESHOOTING

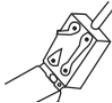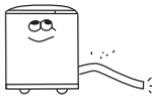No washing	 <p>Is the wash timer knob at the "0" position?</p>	 <p>Power failure? Fuse blown?</p>	Do the pulsator clogged?
No spinning	 <p>Is the spin timer knob at the "0" position?</p>	 <p>Is the lid closed?</p>	 <p>Is the laundry unevenly balanced?</p>
No drain	 <p>Is the drain hose kept down?</p>	 <p>Whether the drain hose is twisted? Or whether the threshold is too high?</p>	 <p>Whether the drain hose is frozen?</p>
Washing is forceless	<ul style="list-style-type: none"> • Are the clothes too much? • Is the V belt too loose? • Is the voltage too low? 		

<p>There is abnormal noise during operation</p>	<ul style="list-style-type: none">• Check if there are coins or any other foreign objects that dropped into the wash tub
<p>There is abnormal noise and violent vibration during spinning</p>	<ul style="list-style-type: none">• Check if the washing machine is placed on a flat, stable surface/floor• Check if the clothes in the spin tub is distributed evenly• Check if there is washing material dropped on to the outside of spin tub

PART 6: SPECIFICATIONS


MODEL	WT 1081 WTM	WT 1200 WTM	WT 2012 WTM
Type	Twin tub	Twin tub	Twin Tub
Wash capacity	10 kg	12 kg	20 kg
Spin capacity	6 kg		12 kg
Rated washing power (W)	490 W	500 W	550 W
Rated spin-dry power (W)	200 W		250 W
Glass cover	Yes	Yes	No
One water inlet hole	Yes	Yes	Yes
Wash/spin water inlet selection	Yes	Yes	Yes
Bubble maker function	Yes	No	No

APPENDIX 1: INTERNATIONAL TEXTILE

CARE LABEL

Notice the wash code symbols on attached clothing labels. In taking care of your clothes, preferably before washing by the machine, you need to pay attention to the wash code symbols on the label attached to your clothing, the description is outlined below:


	Normal wash action		Washing temperature max. 95 °C
	Gentle wash action		Washing temperature max. 60 °C
	Washing by hand		Washing temperature max. 40 °C
	Do not wash		Washing temperature max. 30 °C
	Bleach		
	Chlorine bleach can be used		Do not give the bleach
	Ironed		
	Can be ironed until 200 °C		Can be ironed until 100 °C
	Can be ironed until 150 °C		Do not ironed
	Dry cleaning		

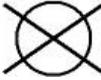	Dry cleaning with all abstergent		Dry cleaning with besin, pure alcohol and R111
	Dry cleaning with perchloride, petrol, pure alcohol, R111 and R113		Do Not dry clean
	Drying		
	Drying by stretched		Drying with machine dryer at high temperatures
	Drying by swing		Drying with machine dryer at low temperature
	Drying using hangers clothing		Do not dry using the dryer

APPENDIX 2: USEFUL INSTRUCTIONS IN REMOVING THE STAIN

Stain removal instructions below are approximate and can only be used on clothing / materials that can be washed.

	<p>Alcoholic Beverages: Clean up material with water first, then use the liquid and rinse water-glycerin with a vinegar-water liquid.</p>
	<p>Blood Spot: Soak the clothes for 30 minutes in cold water. Use liquid ammonia to remove stains. (4 liters of water - 3 tablespoons of ammonia)</p>
	<p>Shoes polish: Without damaging the material, removes stain carefully by rubbing it with detergent. If this does not help, provide the water and liquid alcohol (2:1) and rub the material, then wash with warm water.</p>
	<p>Ice-cream, Milk and Cream: Put the clothes in cold water for a few moments. Rub with detergent, and rinse with warm water. If there is residual fat, get rid of it using oxygen water.</p>

 	<p>Tea and Coffee: Pour hot water on the stain. If the material is white, pour a little bleach and rinse with water.</p>
	<p>Chewing Gum: Harden the gum stains by putting ice on it. Then wash the stain carefully.</p>
	<p>Moss: Do not let stains moss materials for too long. Put the clothes into the cold water for a few moments, rub with detergent, and rinse with warm water. If there is residual fat, eliminate using the oxygen water.</p>
	<p>Chocolate: Soak the clothes in cold water for a few moments. Rub with detergent, and rinse with warm water. If there is residual fat, get rid of it using oxygen water.</p>
	<p>Fruit: Pour cold water on the stain and do not use warm water to rinse it. Let it be for 2 minutes and remove the stains with white vinegar and rinse it.</p>
	<p>Tomato paste: Rub hardened tomato paste and soak it in cold water for 40 minutes. Rub with detergent and then rinse.</p>
	<p>Ink: Wet the stain on the clothes with cold water and wait until the ink stain lost. Then rub with lemon juice and detergent. Let the stains for 5 minutes and rinse the clothes.</p>
	<p>Eggs stain: If the stain hardens, scrub and remove stains with a soft cloth. Then rub with detergent and rinse with cold water.</p>

	<p>Grass stain: Rub stain with detergent. If possible, use bleach. For wool, use alcohol for good results.</p>
	<p>Oil / Fat Stain: Scrub the stain with detergent and rub it. Then, wash the material with warm water.</p>
	<p>Paint : Use paint thinner to remove the stain. Put on cotton wool. Rub stain with detergent and rinse with cold water.</p>
	<p>Mustard: Use glycerin and rub it with detergent. If unsuccessful, remove the stain with alcohol. (Colored and synthetic materials need 2 cups of water and 1 cup of alcohol liquid).</p>
	<p>Burn Stain: Use bleach if possible. For wool, give oxygen water to the stain and scrub. Rinse and wash material.</p>

MODENA